




Ref.	Part no.	Description	Notes
1	600 616 40	Hex screw	M 16 * 40
2	502 837 80	Transport ass. Mounting LH	
3	802 716 80	Spring washer	WZ 16
4	801 310 20	S/L Bolt	M 10 * 20
5	802 010 50	S/L Nut	M 10 Tensilock
6	502 812 03	Press floor	
7	502 825 03	Rotor grill	
8	800 612 25	Hex. Screw	M 12 * 25
9	801 312 30	S.L. Bolt	M 12 * 30 / M 13 * 35 Tensilock
	801 312 35		
10	502 505 05	Upper x-member	
11	502 817 03	Side plate	
12	002 619 10	Side bend	
13	801 310 16	S/L Bolt	M 10 * 16 Tensilock
14	502 826 01	Transprot ass. Mounting RH	
15	502 846 01	Lock comp. Items 16 to 19	
16	502 053 01	Lock body	
17	502 054 00	Lock bolt	
18	574 012 00	Bolt spring	
19	502 055 00	Bolt handle	
20	801 310 25	S/L bolt	M 10 * 25 Tensilock
21	802 012 51	S/L Nut	M 12 Tensilock
22	802 015 00	Hex. Nut	M 16
23	800 612 35	Hex. screw	M 12 * 35 / M 12 * 40
	800 612 40		
24	802 712 80	Spring washer	WZ 12
25	800 612 40	Hex. screw	M 12 * 40 / M 12 * 45
	800 612 45		
26	800 616 30	Hex. screw	M 16 * 30
27	502 078 00	Swingarm pivot pin	
28	804 506 40	Roll pin	E6 * 40
29	502 077 00	Swingarm pivot bracket	
30	801 310 30	S/L Bolt	M 10 * 30 Tensilock
31	50-6540-0002-1	Protection sheet	
32	9-0001-2012-16	Bolt	M 8 * 16 Din 558
33	9-0001-2157-21	Spring washer	B8 Din A27
34	50-6480-0042-0	Protection cover	
35	50-3875-0001-1	Grill	

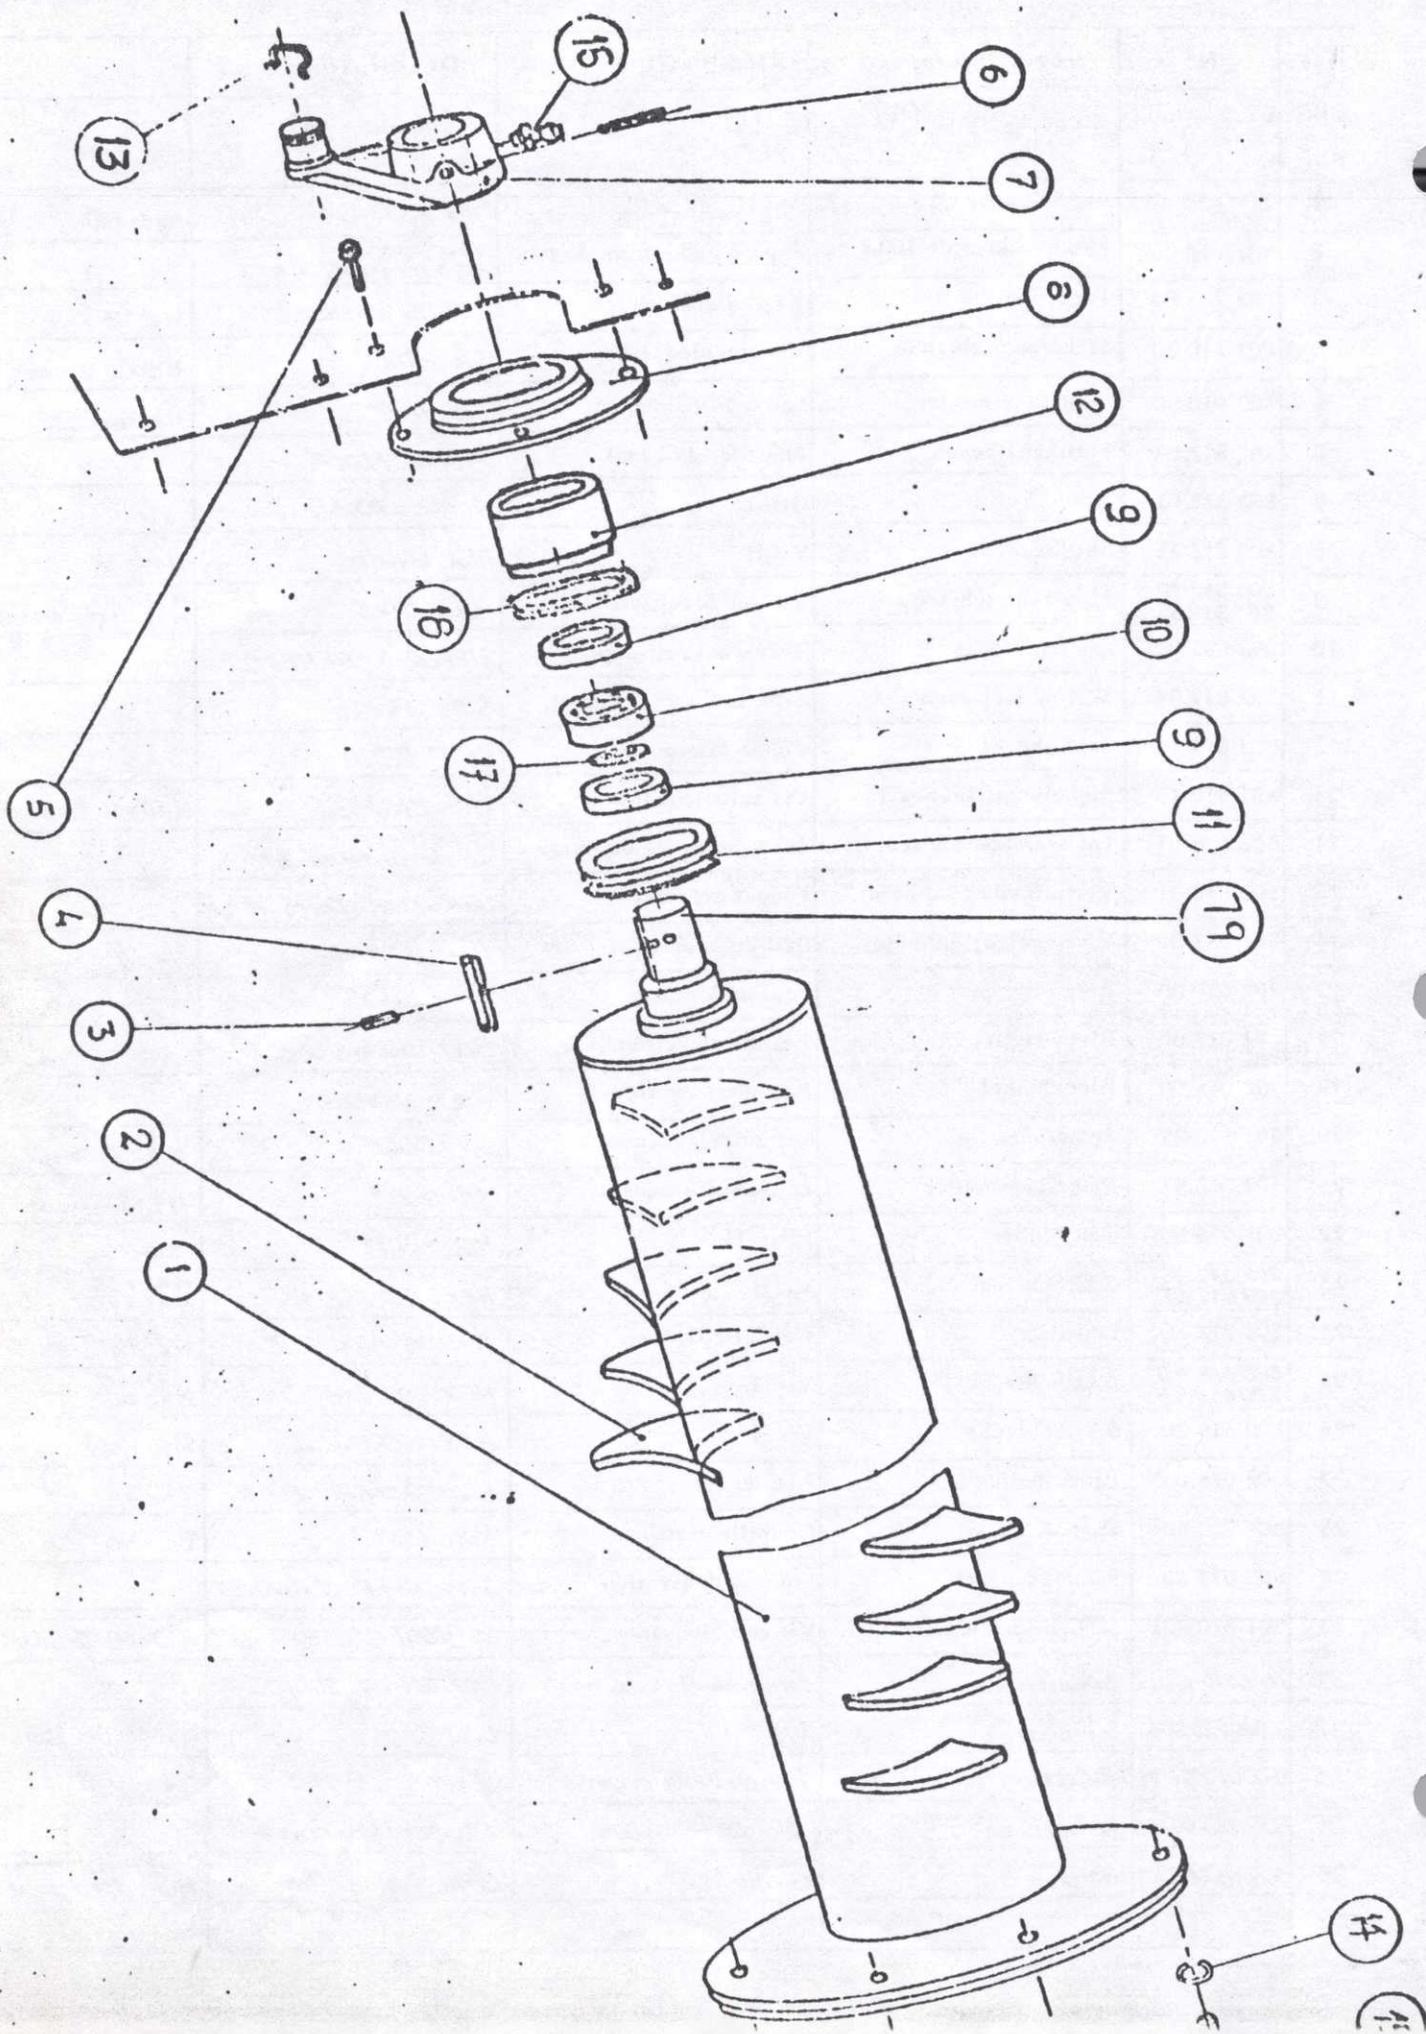



Ref.	Part no.	Description	Notes
1	502 829 01	Rotor comp.	
2	002 035 01	Rotor blade	
3	804 505 15	Roll pin	E5 * 15
4	502 033 00	Key	
5	801 310 19	S/L Bolt	M 10 * 18 Tensilock
6	804 510 57	Roll pin	E10 * 656
7	502 031 02	Crank	
8	502 032 10	Bearing Housing	
9	620 160 89	Distance ring	60/90 * 8 Bi
10	811 450 90	Bearing, S/A	222 10 c
11	820 485 10	Sealing ring	V95 A
12	502 057 01	Sliding housing	
13	805 830 00	Circlip	30 Din 471
14	502 71680	Spring washer	WZ 16
15	800 616 53	Hex. Screw	M 16 * 95
16	822 006 00	Grease nipple	M 6 * 100
17	802 062 00	Shim	720 256
18	502 076 00	Trust washer	
19	002 144 00	pivot pin	

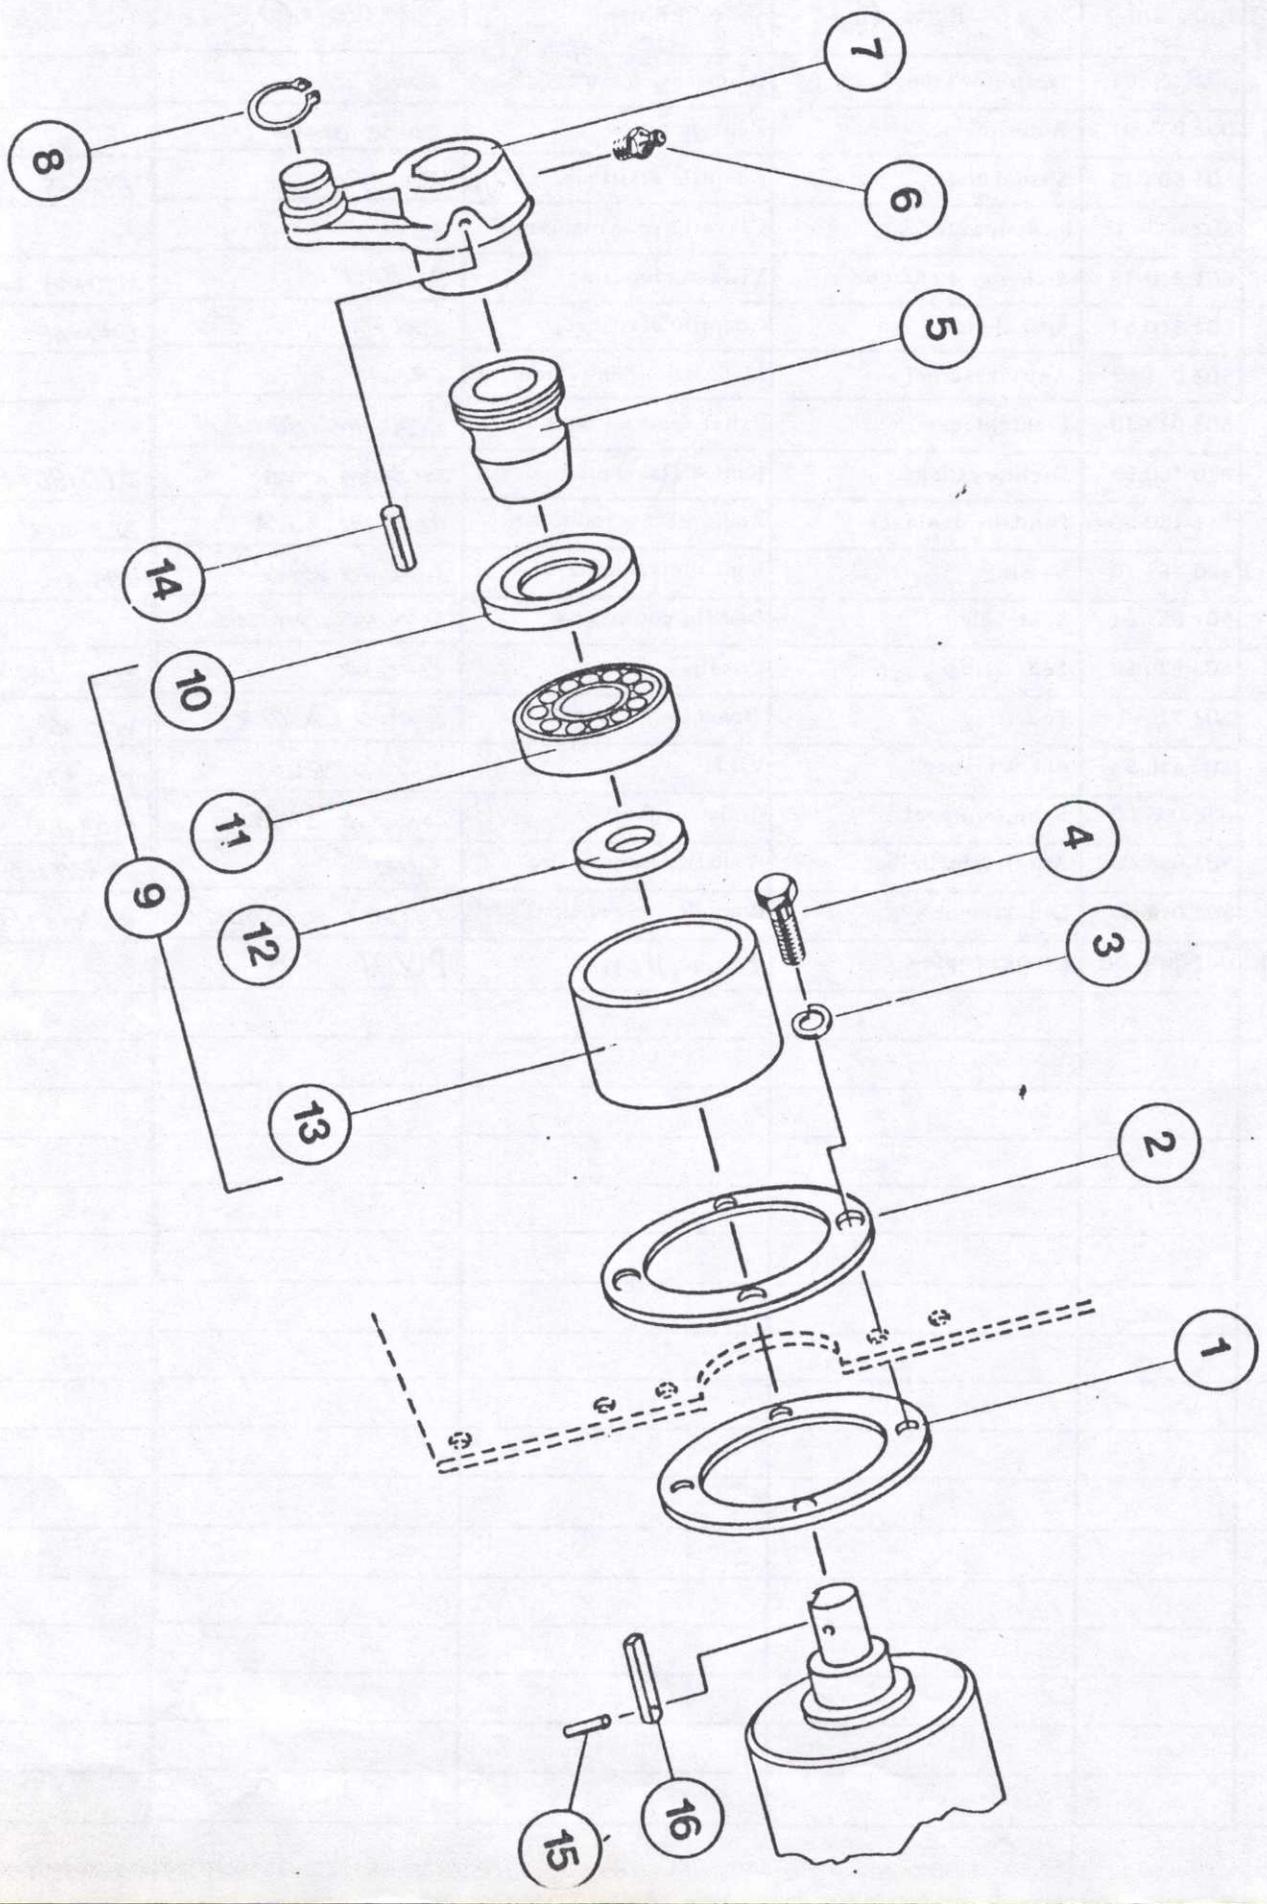


Ref.	Part no.	Description
1	502 101 00	Inner bearing housing
2	502 891 00	Outer bearing housing
3	802 710 80	Spring washer
4	800 810 06	Bolt
5	811 950 60	Puller bushing
6	822 006 00	Grease nipple
7	502 031 10	Crank
8	805 830 00	Circlip
9	502 890 00	Sliding housing complete
10	820 170 60	Distance ring
11	811 450 00	Bearing S/A
12	820 160 89	Distance ring
13	502 057 10	Sliding housing
14	804 510 59	Roll pin
15	804 505 15	Roll pin
16	502 033 10	Key

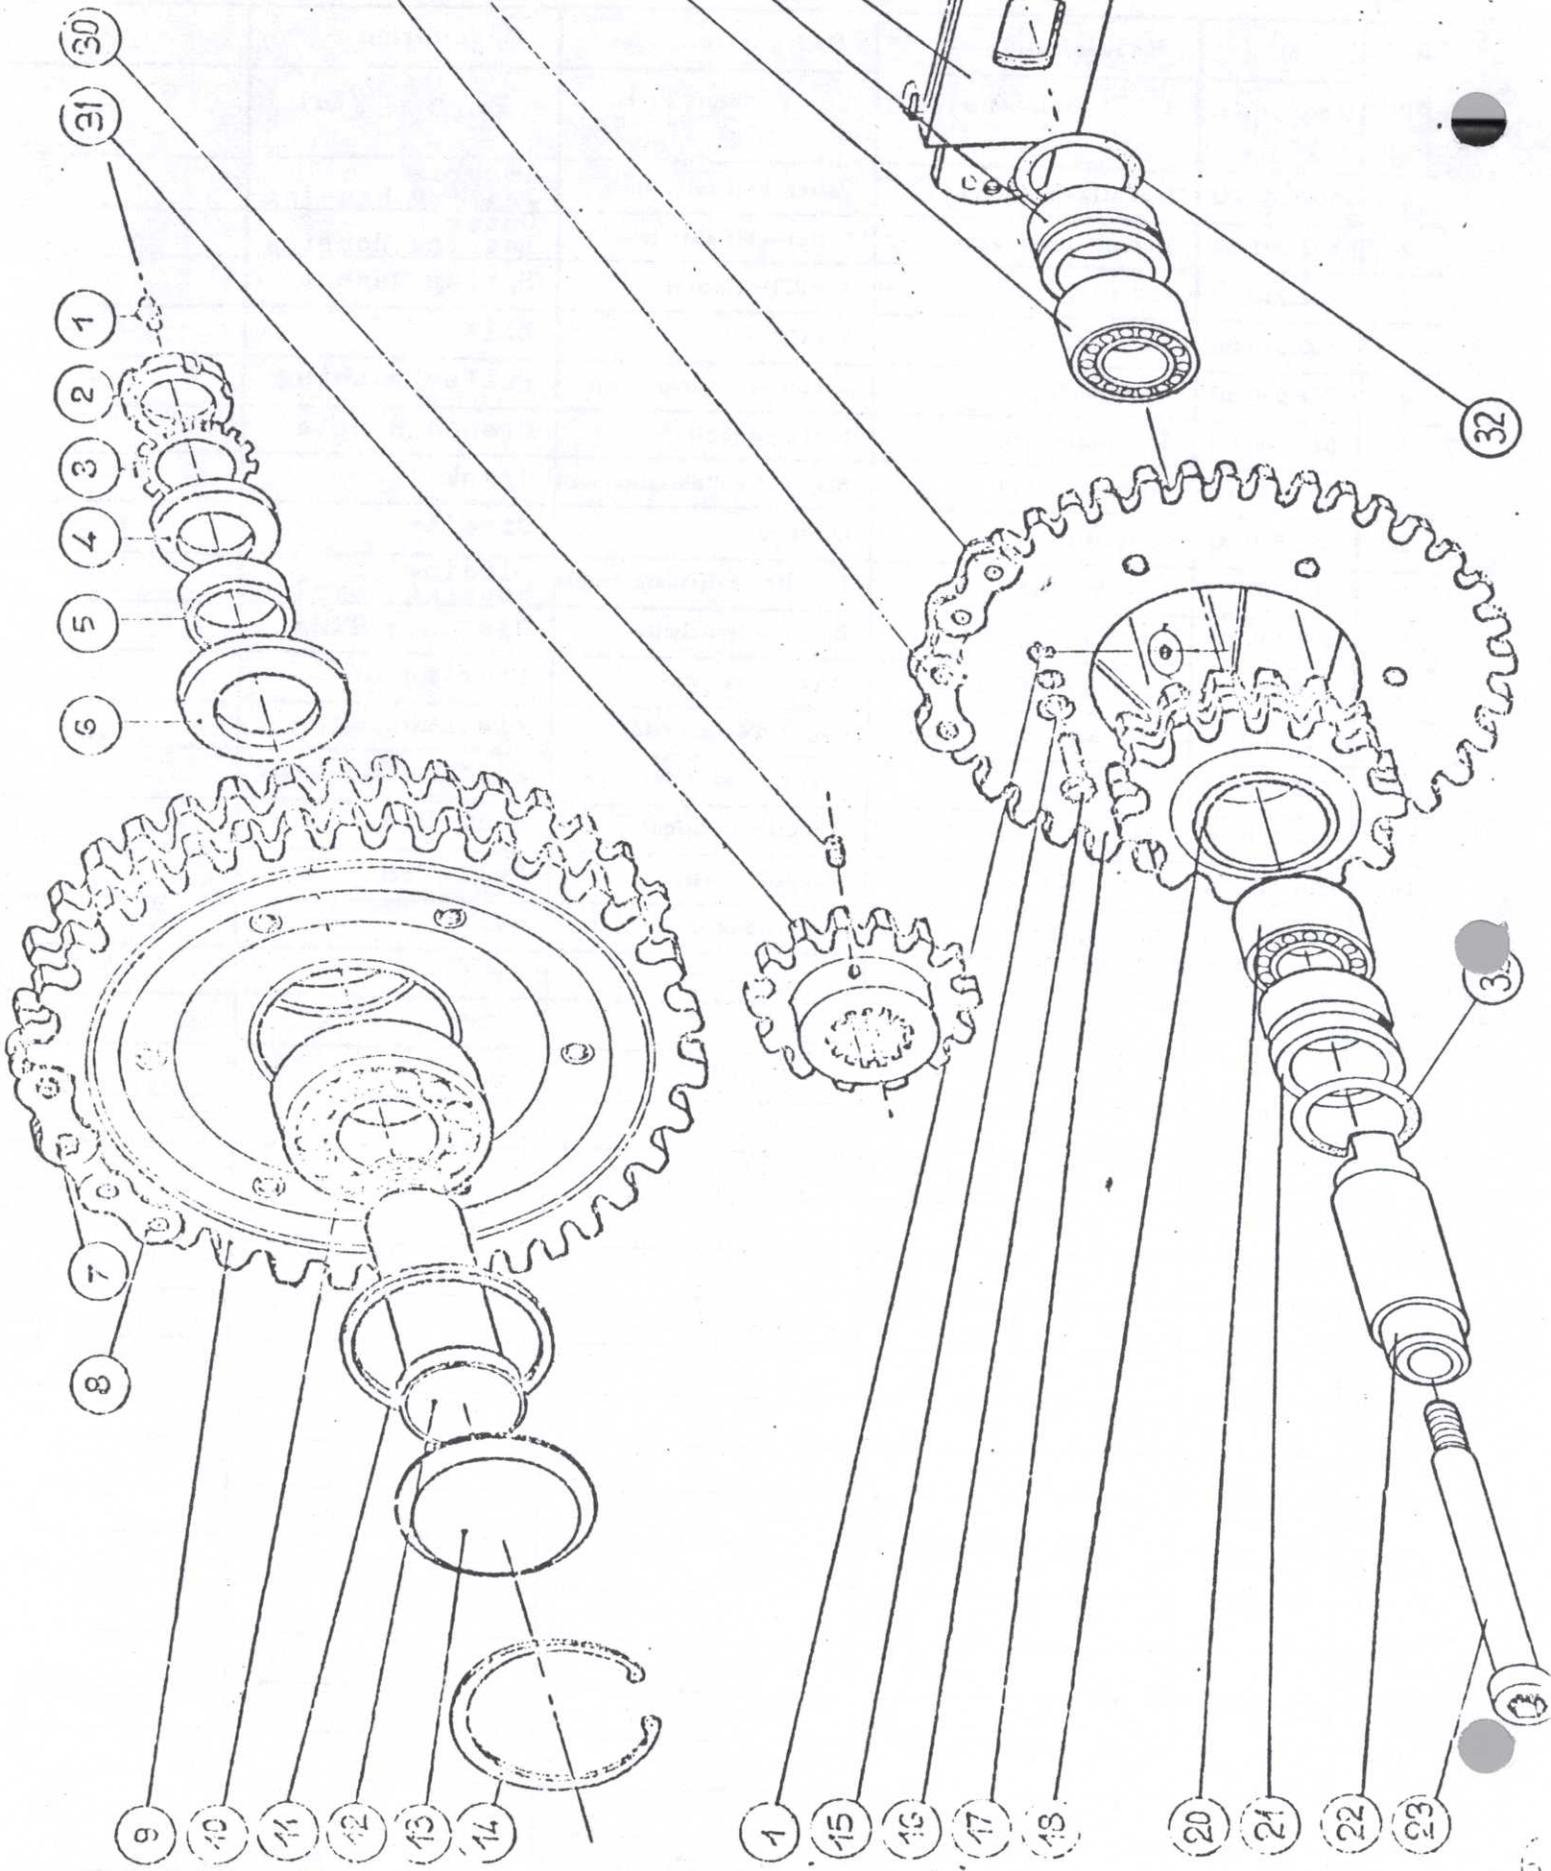


Ref.	Part no.	Description	Notes
1	822 008 00	Drive gear (3)	
2	802 050 18	Grease nipple	M 8 * 1 Din 17 412
3	502 950 20	Ring nut	M 50 * 1.5
4	502 010 00	Lock washer	
5	502 009 00	Flat washer	52 Din 126
6	820 170 70	Distance ring	
7	8 31 235 00	Spacer	70 * 110 * 13
8	831 238 01	Joining link	Glued F-24B-2 Din 8187
	831 238 02		
	831 238 03		
9	502 003 01	Double sprocket	
10	811 460 30	Bearing	223 12 C
11	502 011 01	Outer spacer	
12	502 008 00	Main shaft	
13	502 012 00	Cover plate	0 130 * 2,2 Din 430
14	805 900 05	Circlip	130 * 4 Din 472
15	502 712 50	Spring washer	
16	800 612 40	Hex. Screw	M 12 * 35 Din 933
17	502 001 10	Sprocket	
18	502 000 12	Double sprocket	
20	814 055 81	Needle roller bearing	JNA NA 6911
21	502 007 10	Distance ring	
22	502 006 10	Eccentric shaft	
23	502 803 00	Shaft centre bolt	
24	802 024 52	S/L Nut	M 24 * 1,5 Din 985
25	502 005 00	Thrust washer	26 Din 126
26	802 604 02	Chain tensioner lever	
27	814 055 80	Needle roller bearing	INA NA 4911
28	831 231 01	Joining link	
	831 231 02		
	831 231 03		
	831 231 05		
	831 231 06		
	831 231 07		
29	831 231 00	Roller chain 1 3/4	24-B-1 Din 8187
	831 231 04	Roller chain 1 1/2	24-B-1 Din 8187
30	801 512 16	Allen set screw	M 12 * 16 Din 815
31	502 000 20	Drive sprocket	
32	820 670 78	O-Ring	R 70/4
	502 885 10		

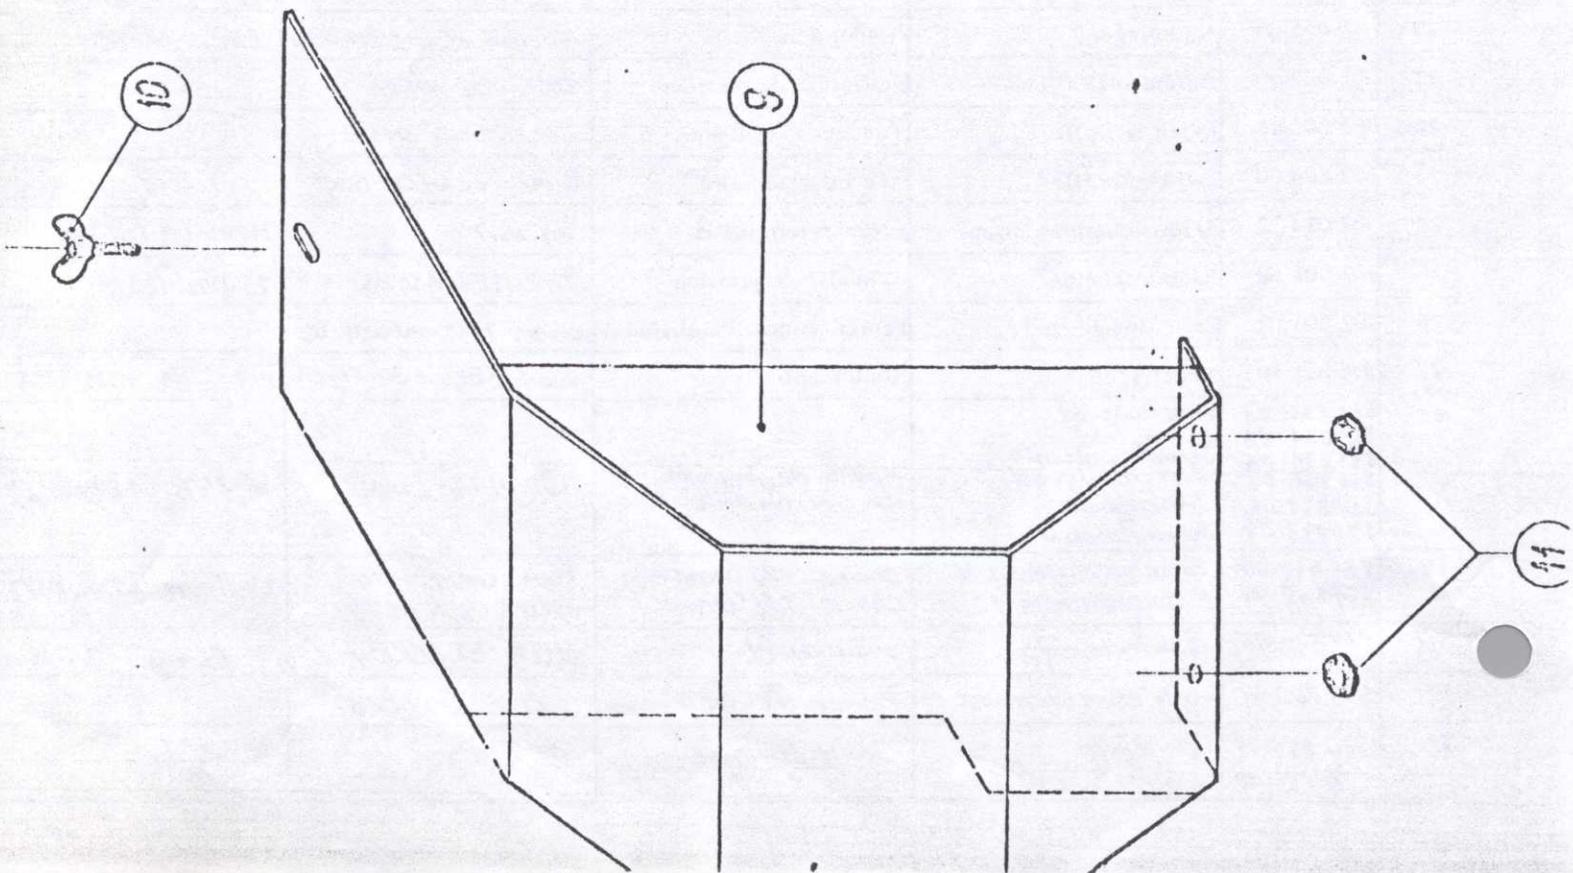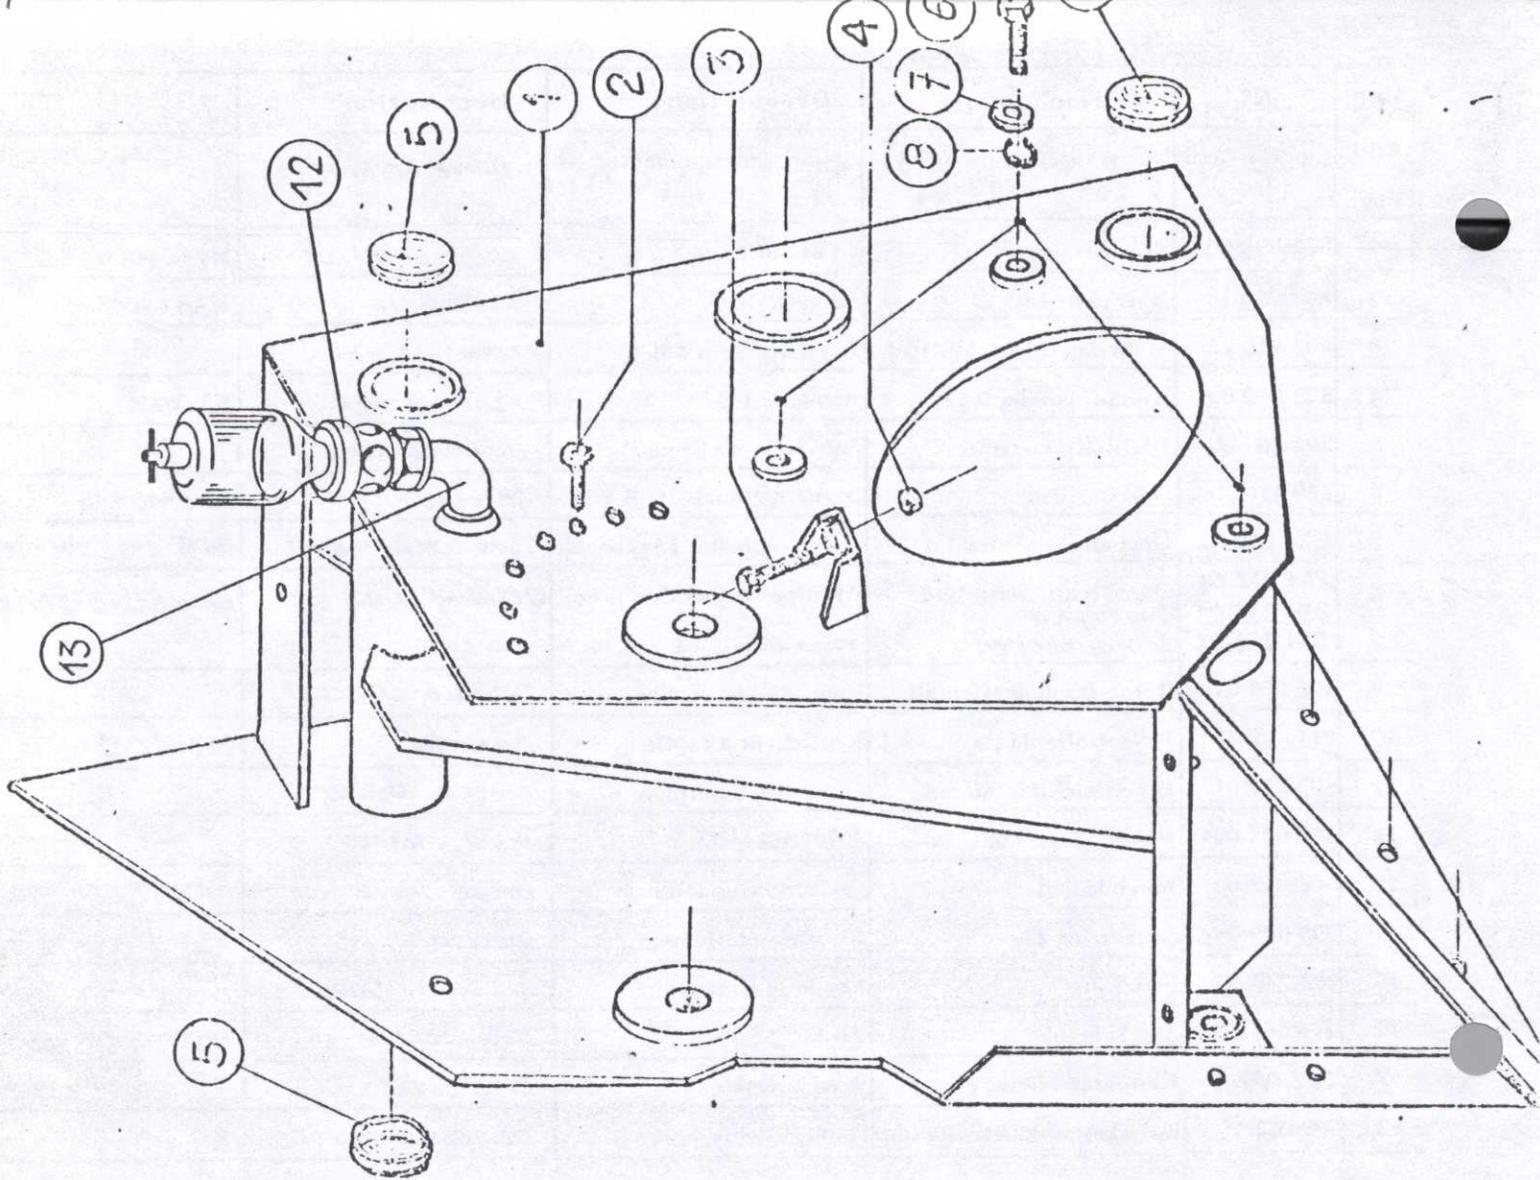


Ref.	Part no.	Description	Notes
1	502 801 03	Drive housing	
2	510 310 22	S/L bolt	
3	500 616 56	Hex. screw	M 16 * 80 Din 933
4	802 016 00	Hex. Nut	M 16 Din 934
5	830 400 61	Core plug	
6	801 616 45	Hex. screw	M 16 * 45
7	802 517 35	Washer	0 17/35 * 3
8	802 716 80	Spring washer	WZ 16
9	802 559 02	Drive housing cover	
10	801 310 15	Wing screw	M 10 * 15
11	882 008 00	Rubber plug	W 69
12	9-0001-3021-25	Drip - oiler	
13	50-0250-0022-0	Connecting Piece	

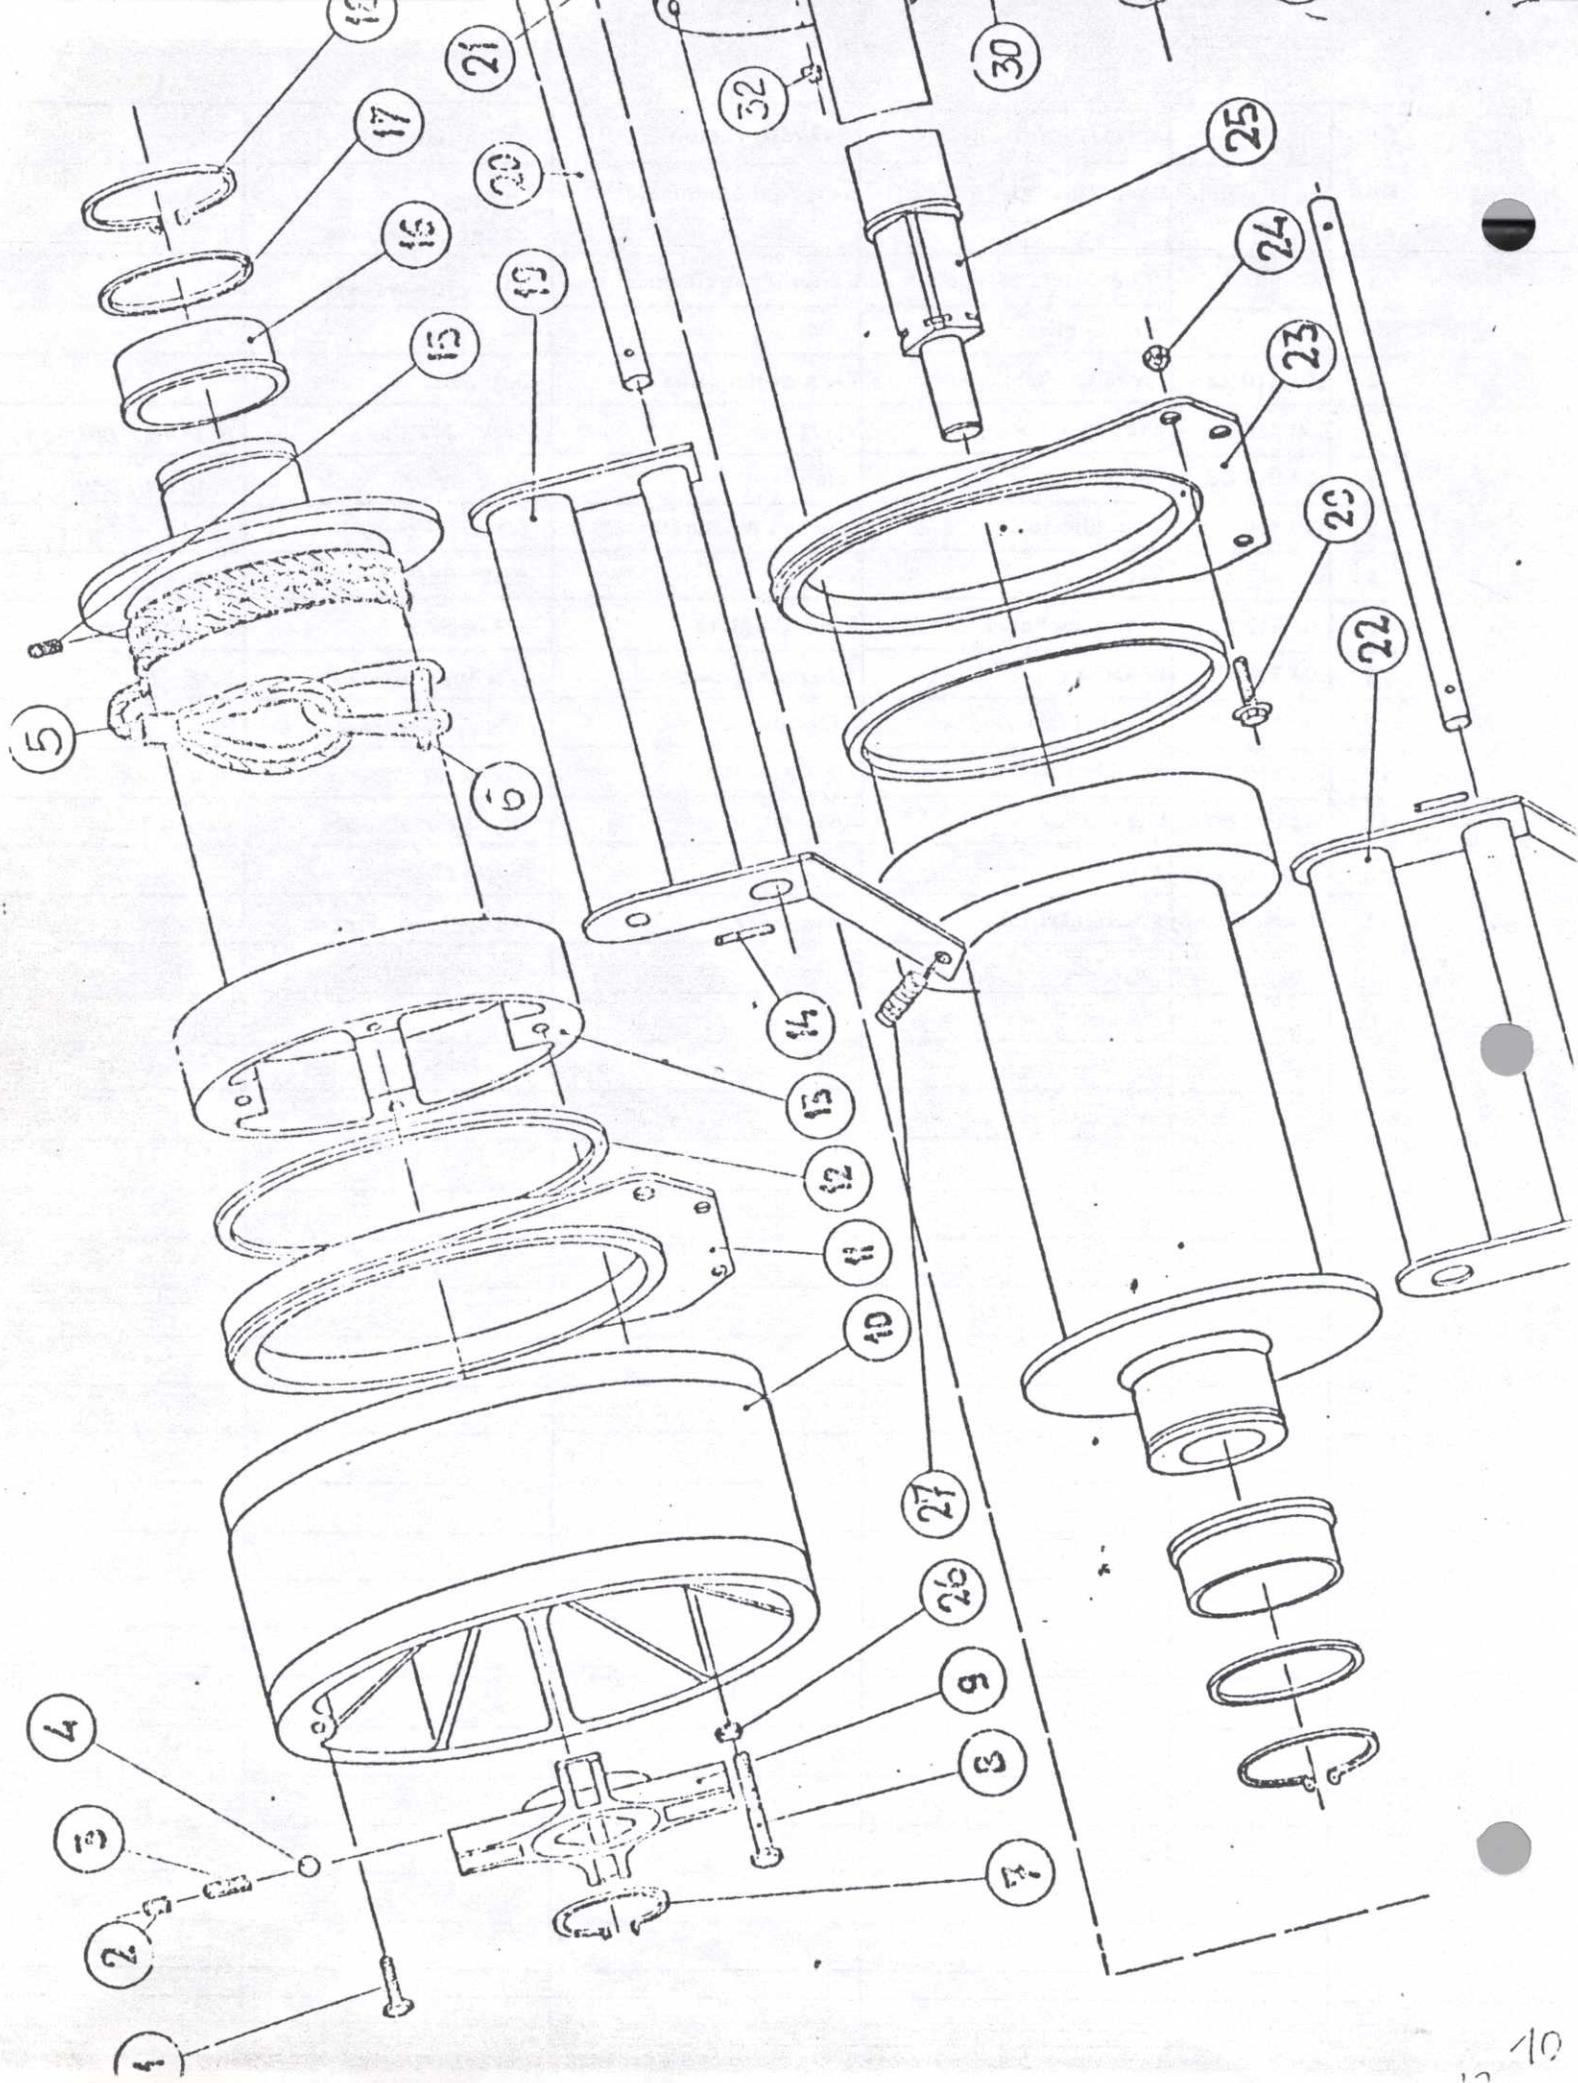


Ref.	Part no.	Description	Notes
1	802 012 50	Hex screw	M 12 * 50
2	801 512 12	Allen screw	HC - M 12 * 12
3	594 197 00	Spring	0 21/93-17/95
4	830 010 00	Steel ball	0 10
5	502 027 02	Wire cable	
6	830 700 53	O-shackle	A 16 Din 82 101
7	805 860 00	Circlip	60 e Din 421
8	800 602 53	Hex screw	M 12 * 65
9	502 025 00	Star coupling	
10	502 054 02	Brake drum	
11	502 018 01	Drum bearing / Plate R.H.	
12	502 070 00	Plate lining	
13	502 023 02	Cable drum R.H.	
14	804 505 35	Roll pin	E6 * 35
15	801 410 17	Allen screw	HC M 10 * 15
16	561 235 01	Bush bearing	0 100/90, 25 * 30
17	502 016 00	Washer	0 100/85 * L
18	805 890 00	Circlip	E 90 Din 471
19	502 814 00	Guide roller R.	
20	502 050 00	Shaft	
21	802 513 23	Washer	0 13/28 * 2
22	502 845 00	Guide roller L.H.	
23	802 049 01	Drum bearing / Plate L.H.	
24	802 012 52	S/L Nut	M 12 Tensilock
25	802 831 01	Brake drum shaft	
26	802 712 80	Spring washer	WZ 12
27	830 014 00	Spring	RS 86
28	502 069 00	Lock washer	
29	801 312 80	S/L Bolt	M 10 * 30 Tensilock
30	502 052 00	Cover plate	
31	801 310 22	S/L Bolt	M 10 * 22 Tensilock
32	802 010 50	S/L nut	M 10 tensilock

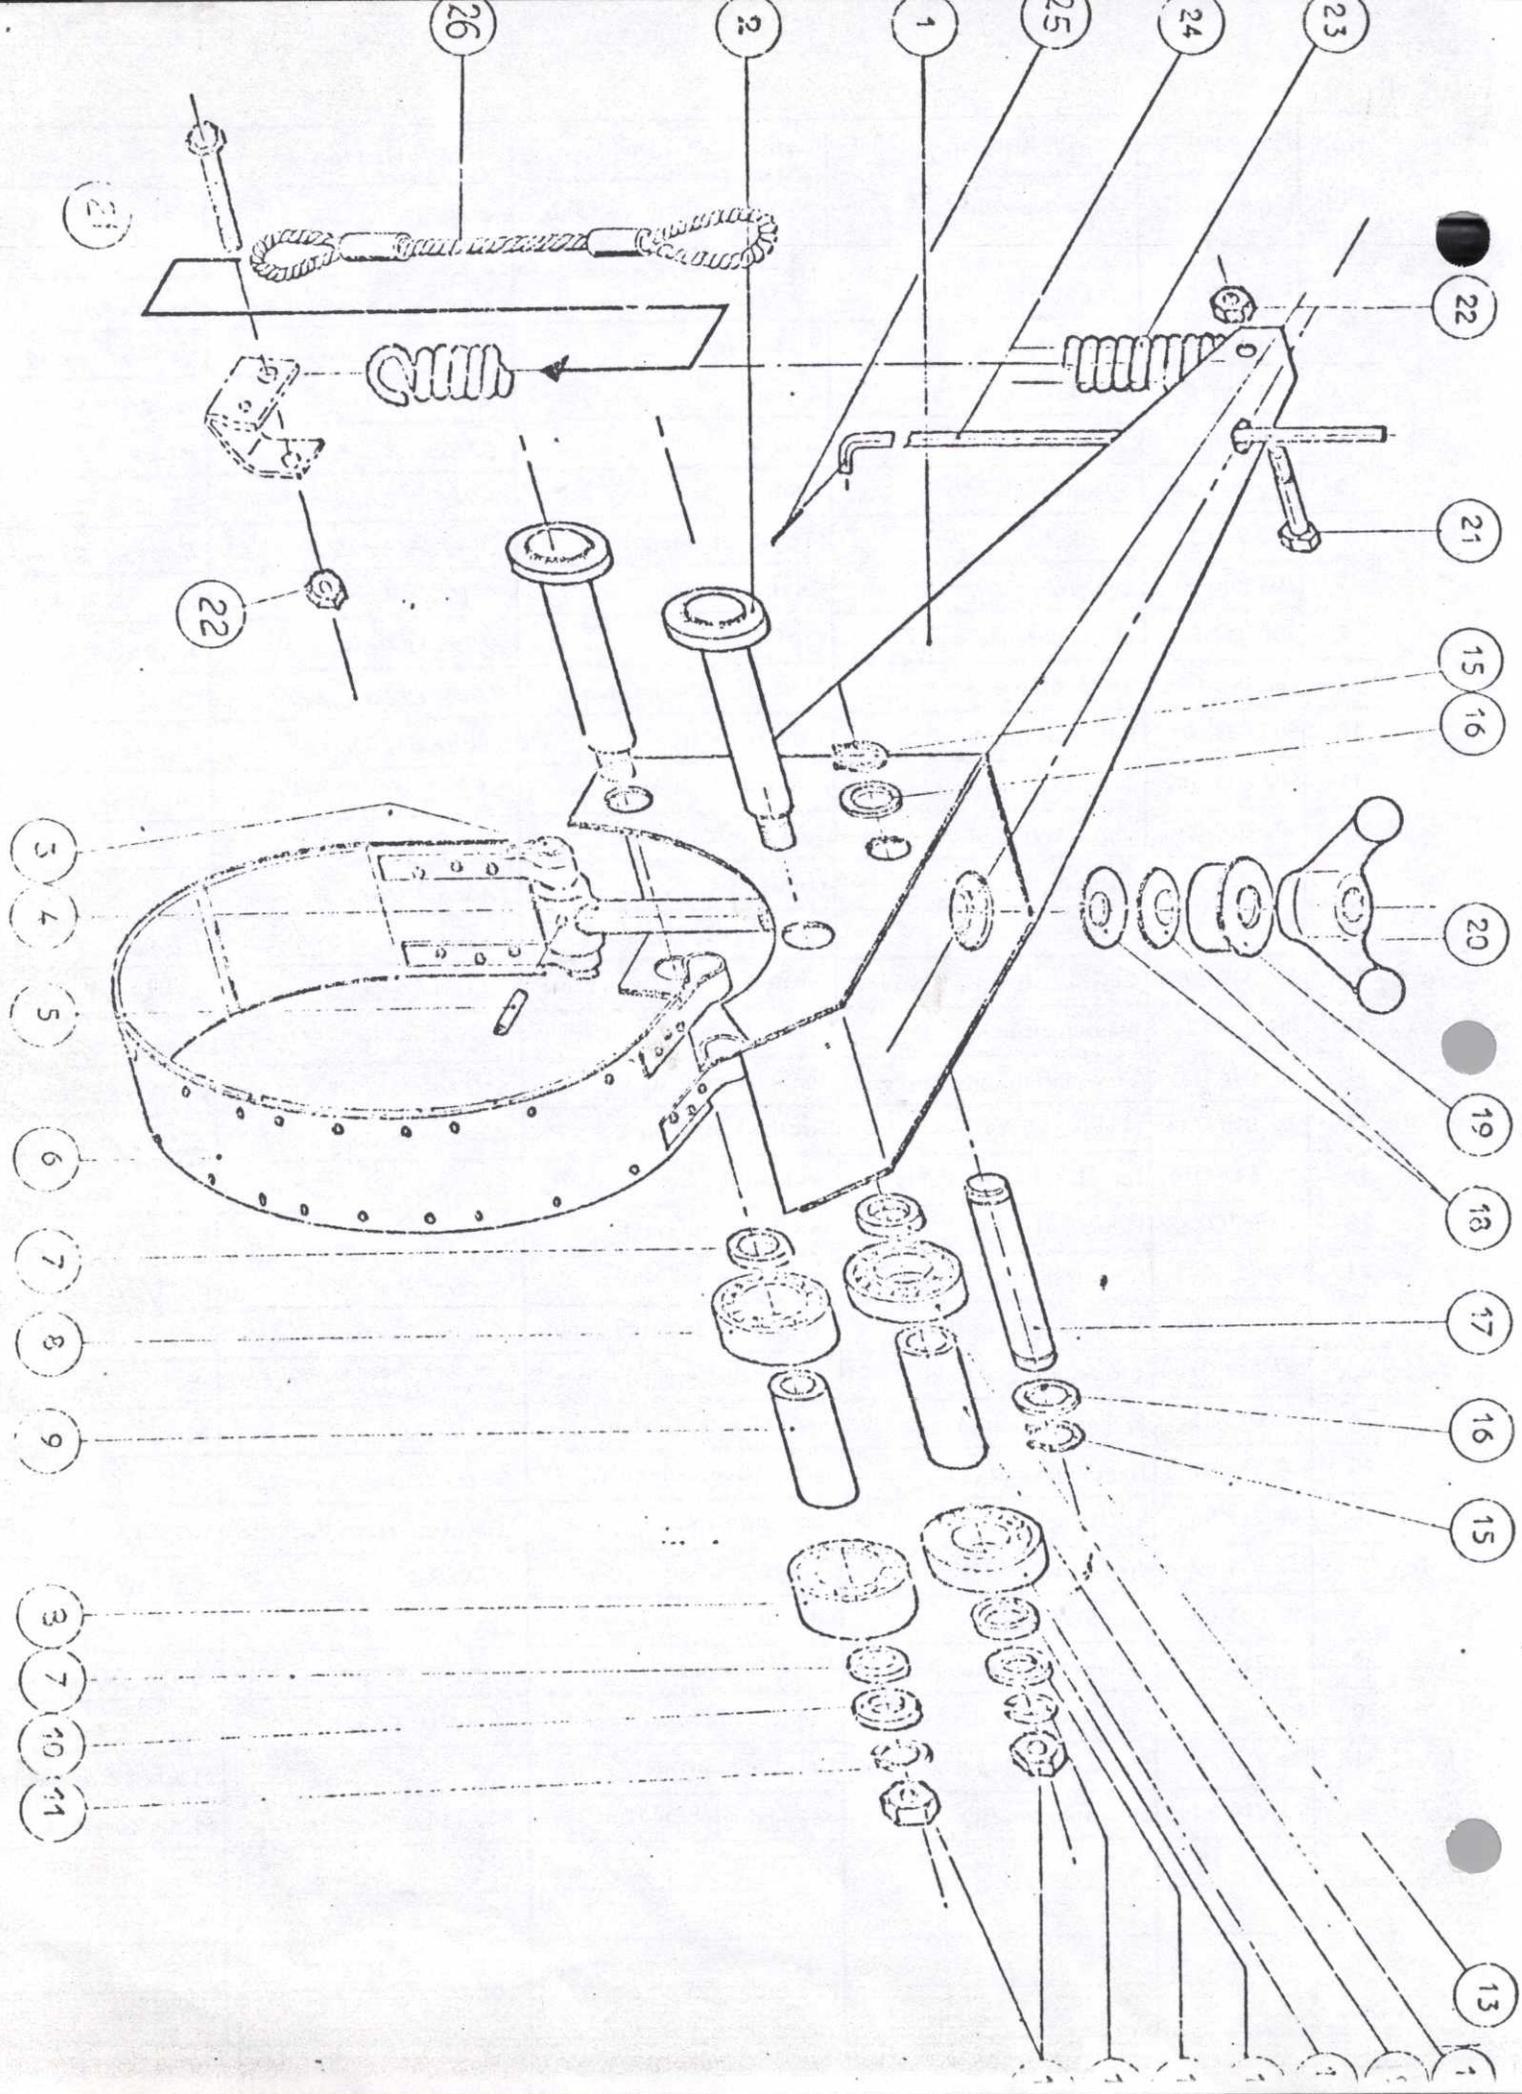


Ref.	Part no.	Description	Notes
1.25	502 849 01	Brake assembly	
1	502 850 01	Brake lever	
2	502 854 00	Bearing shaft	
3	502 061 00	Brake band Anchor pin	
4	502 855 00	Brake rod	
5	504 506 40	Roll pin	E6 *40
6	502 852 00	Brake band	
7	802 530 89	Spacer	0 30/42 * 5
8	810 630 72	Bearing	SKF 305 705
9	502 066 00	Spacing tube	
10	502 520 40	Washer	
11	802 720 80	Spring washer	WZ 20
12	502 070 05	Nut	M 20 * 1-5
13	502 053 00	Lock washer	
14	810 080 74	Ball bearing	SKF 6306 2RS
15	805 825 00	Circlip	E 25
16	802 525 88	Washer	0 25,2/40 * 2
17	502 050 00	Brake band Anchor pin	
18	502 820 08	Belle Ville Spring	0 20,4/50-25/3,85
19	502 856 00	Cover bash	
20	502 068 00	Wing nut	
21	500 514 58	Hex screw	M 14 * 90
22	502 014 28	Nyloc nut	M 14 Nyloc
23	502 065 01	Brake lever spring	
24	502 065 10	Compression gauge	
25	804 503 00	Roll pin	E 3 * 20
26	50-1270-0010-0	Wire cable	0 8 * 560

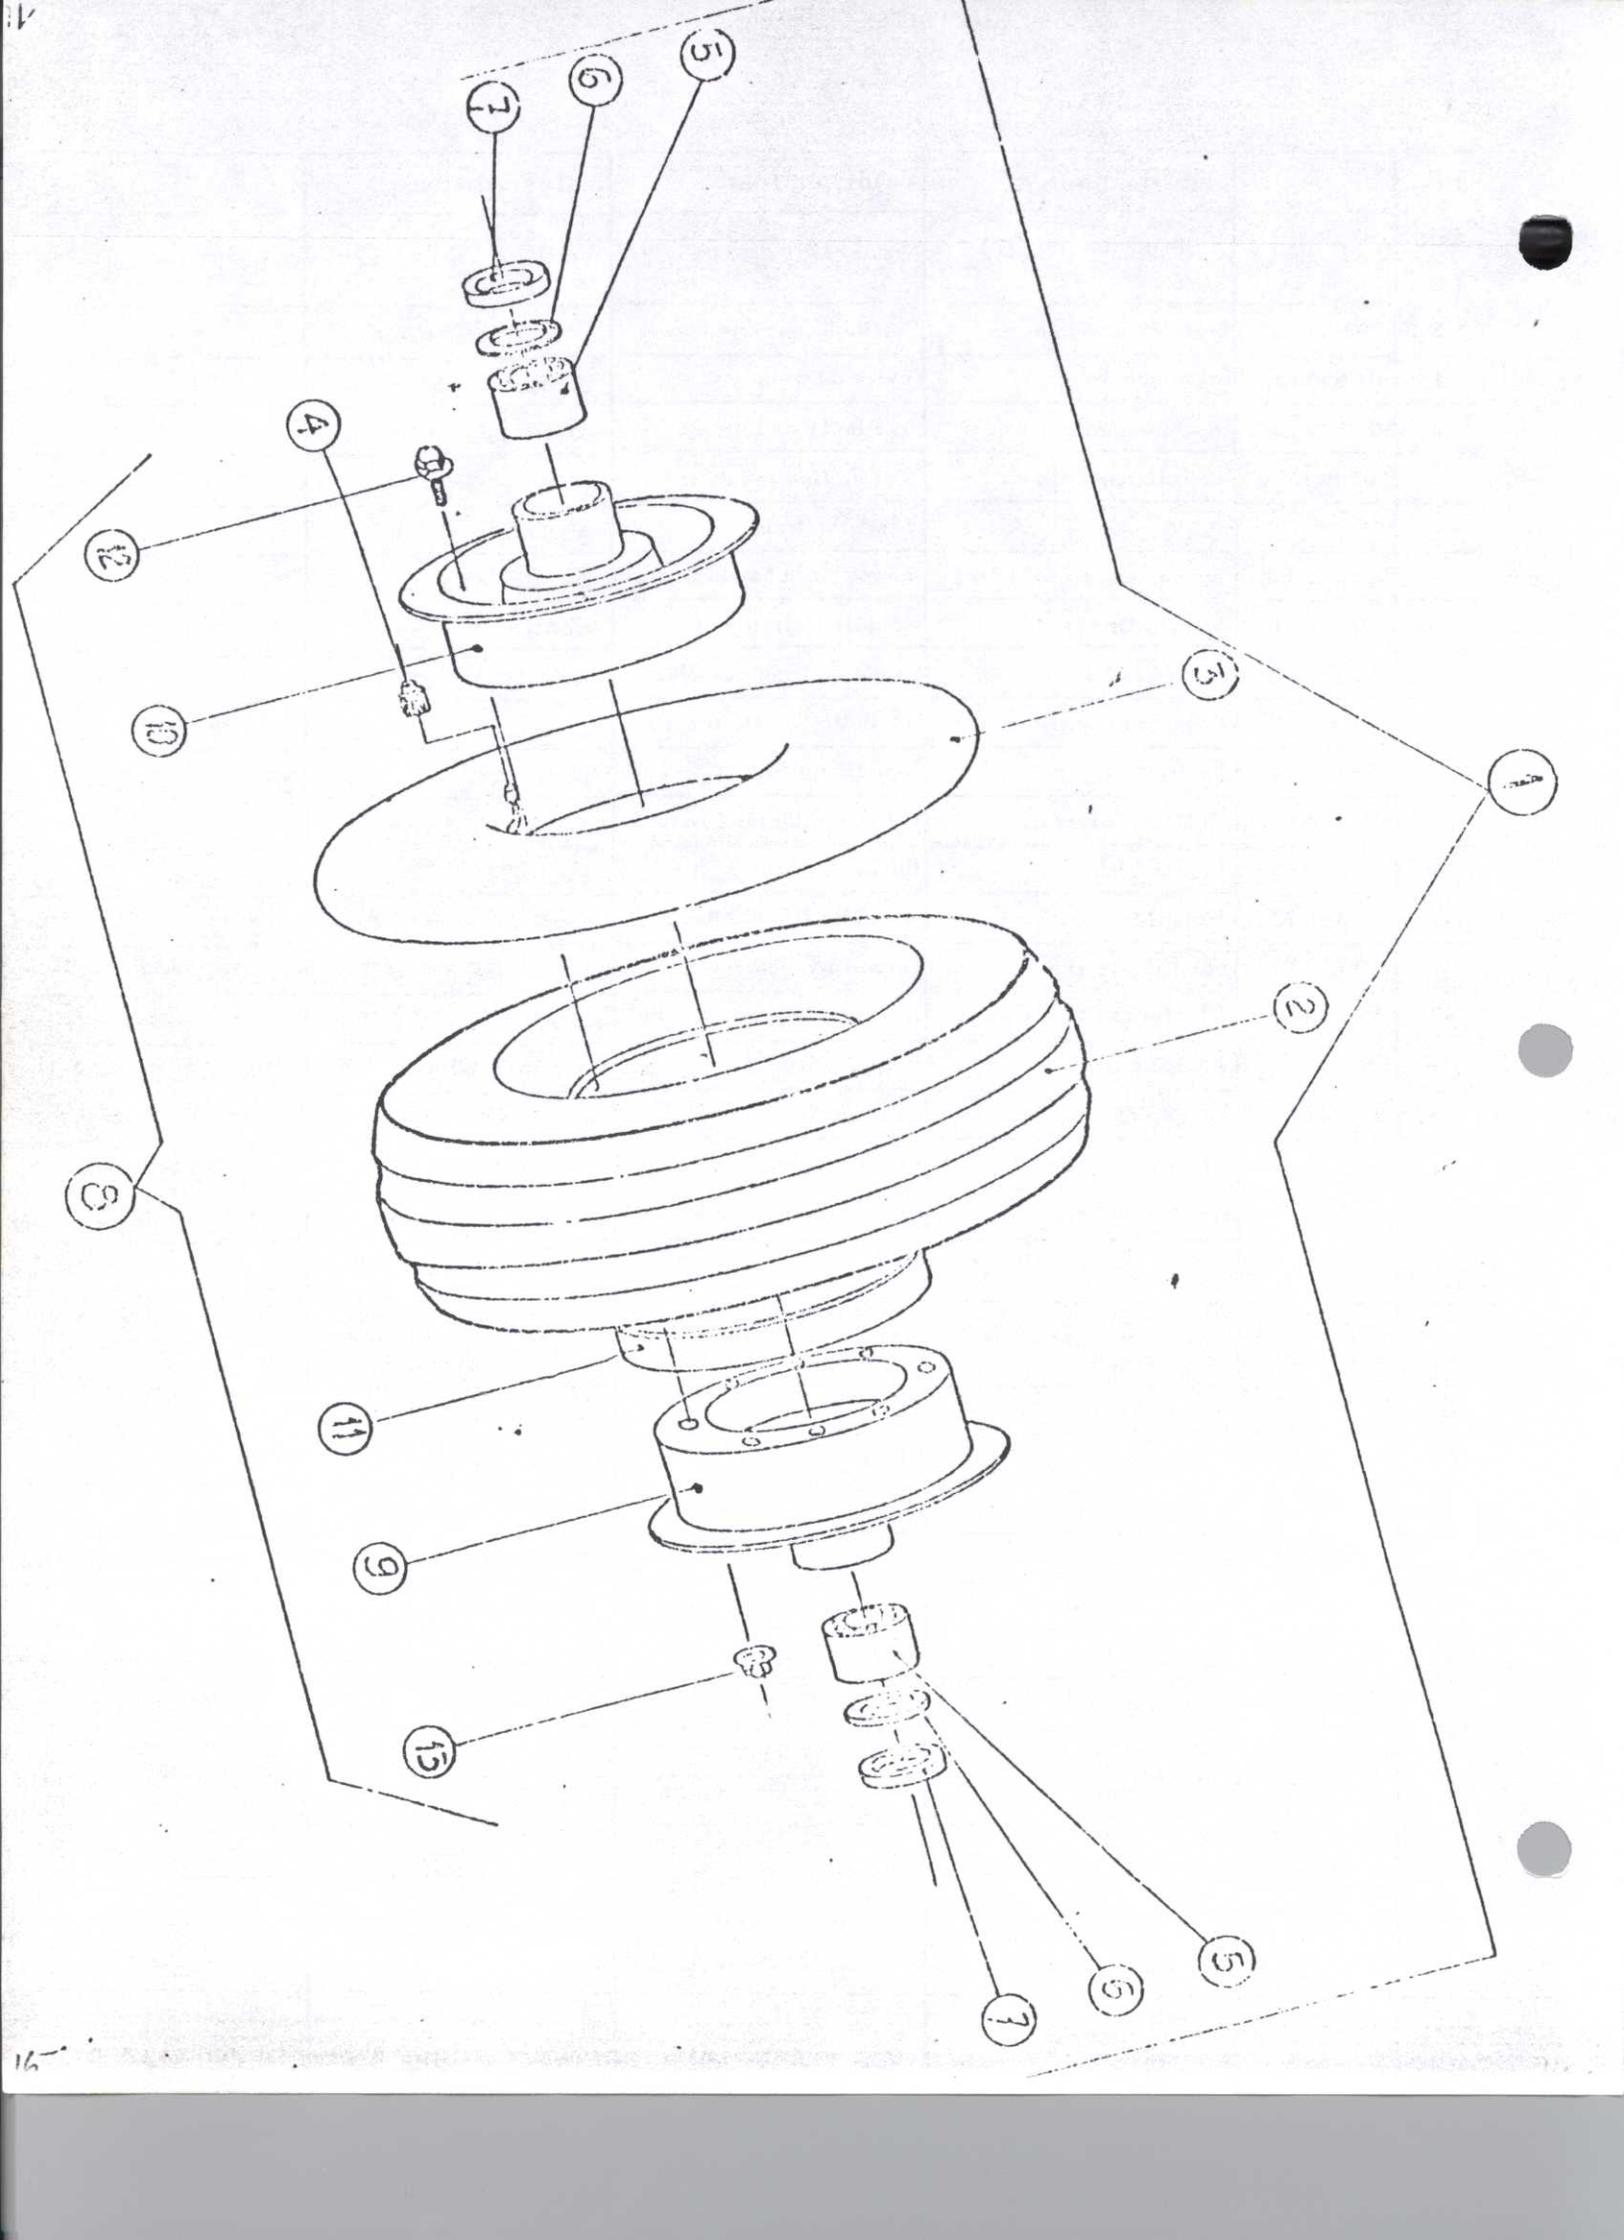


Ref.	Part no.	Description	Notes
1	837 000 01	Wheel complete	
2	833 000 02	Tyre	5,00 8/6 Ply
3	833 000 03	Inner tube	5,00-8
4	833 000 50	Valve cap	
5	813 030 55	tader roller bearing	30 206
6	821 550 55	Nylon washer	30 206 AV
7	502 039 00	Spacer	
8	833 000 04	Complete rim	
9		Half rim	
10		Half rim & Valve hole	
11	833 000 51	Rim liner	
12	801 308 14	S/L Bolt	M8*16-12.5 Tensilock
13	802 003 51	S/L Nut	M8 Tensilock

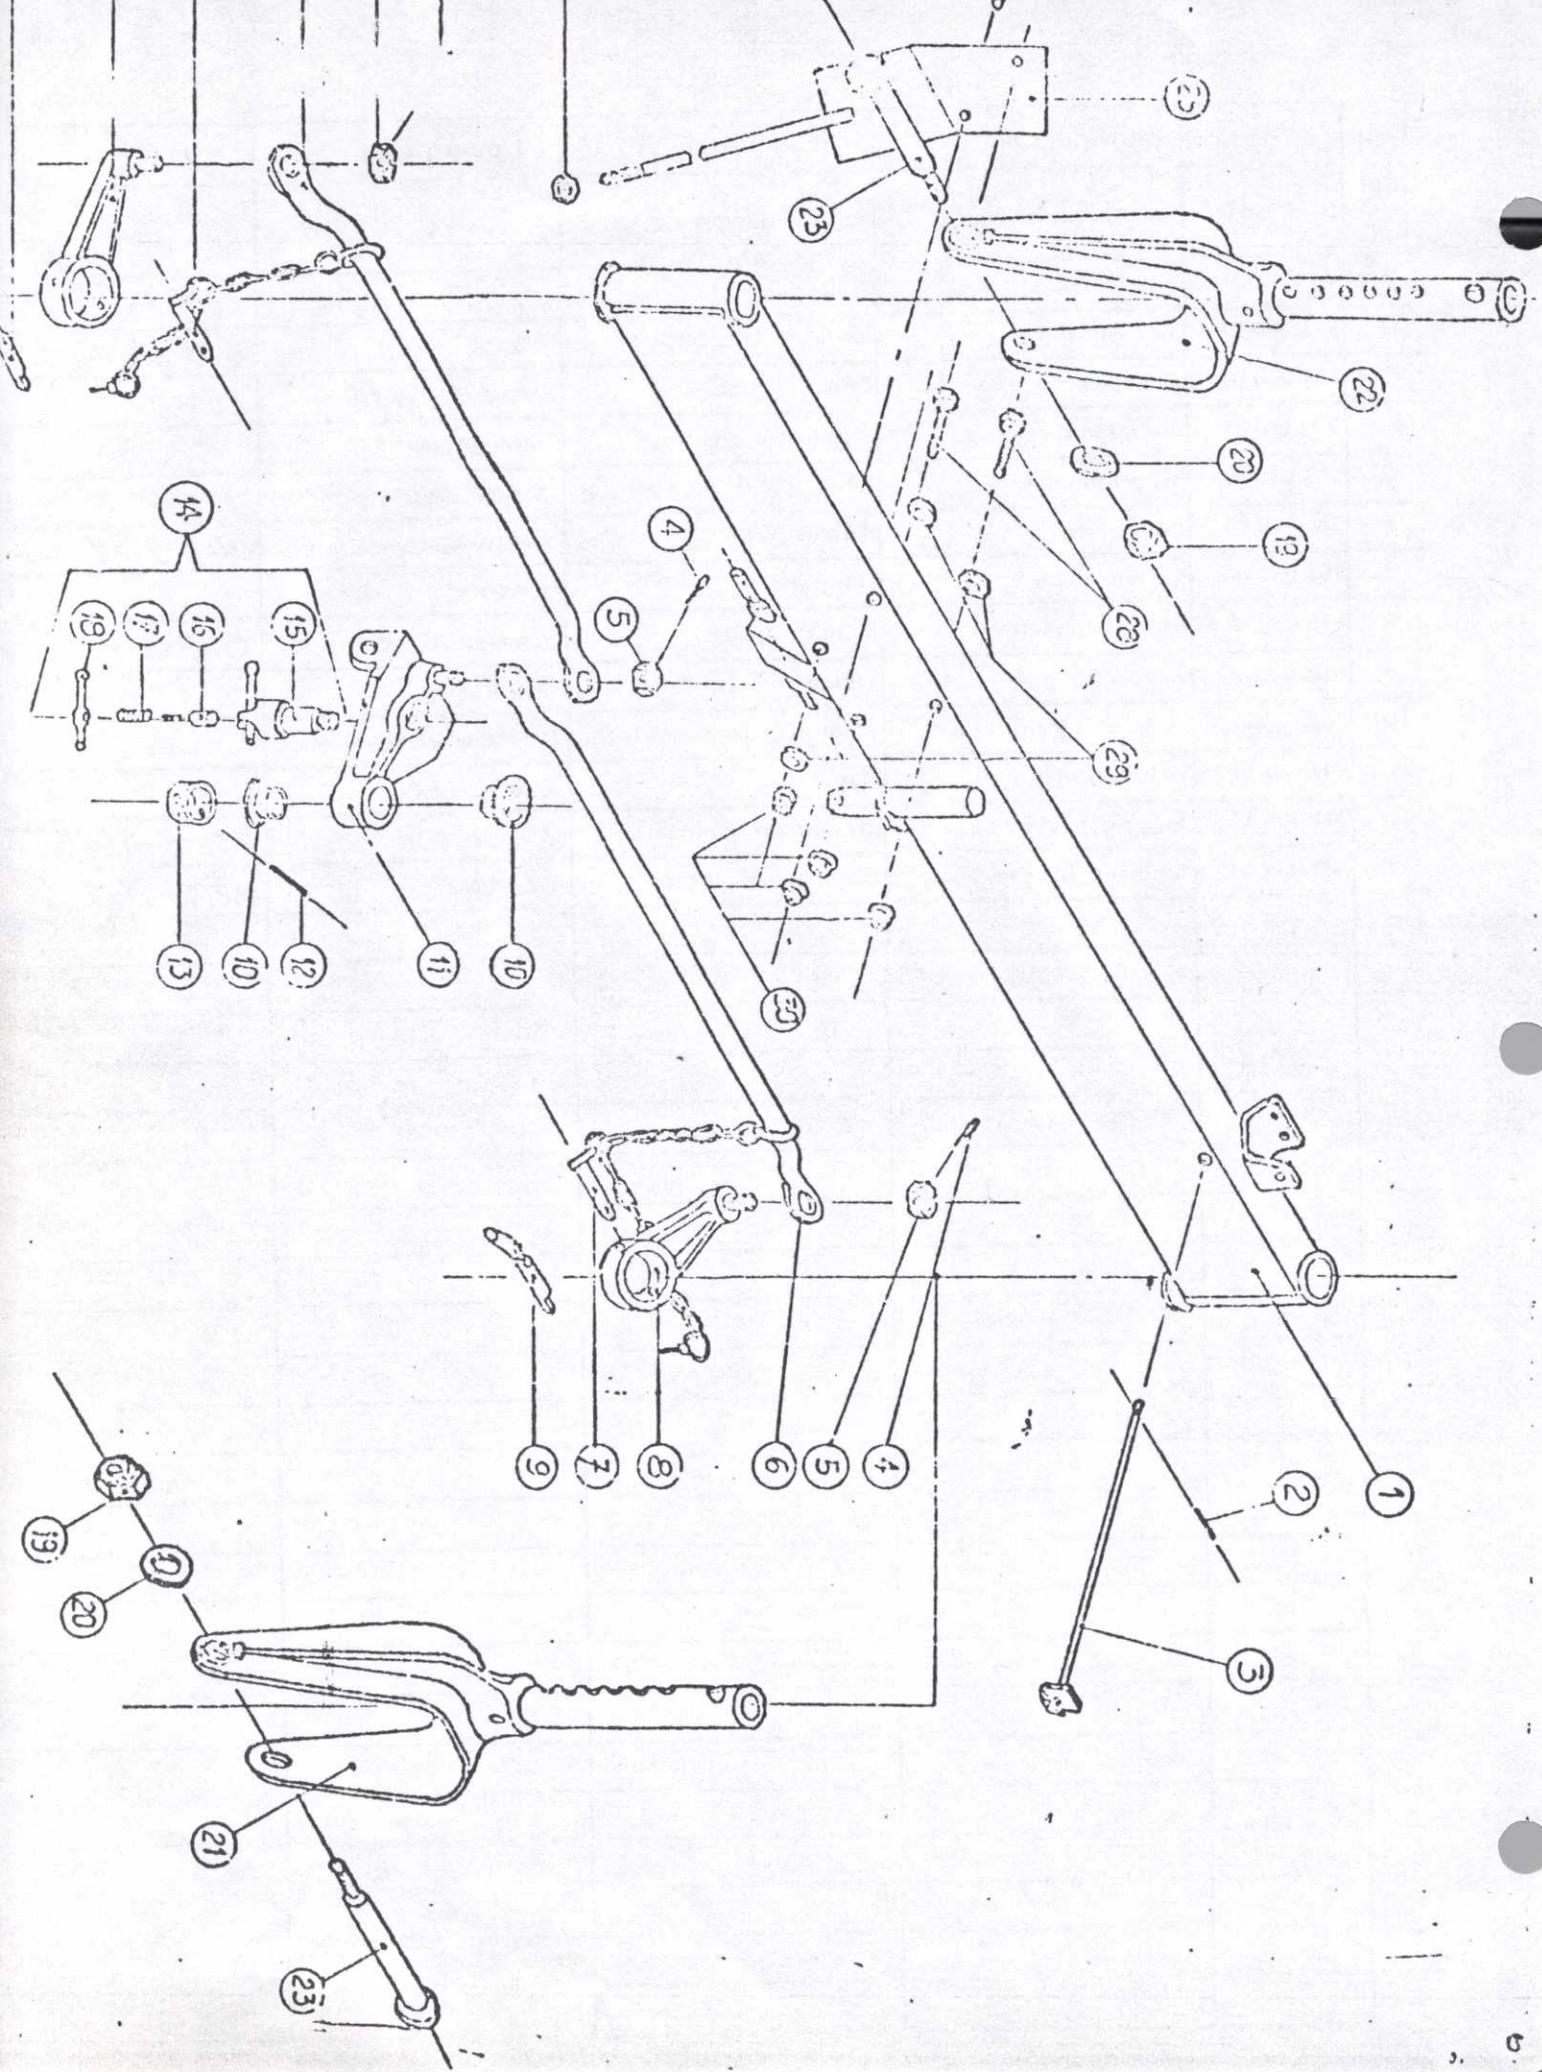


Ref.	Part no.	Description	Notes
1	502 833 11	Cross member	
2	504 503 40	Roll pin	E 6 * 40
3	502 847 00	Chain hook	
4	505 004 40	Split pin	V 5 * 40
5	502 024 17	Crown nut	M24 * 1,5 Din 9037
6	502 036 10	Connecting bar	
7	502 873 00	Pin & Chain	
8	502 869 00	Steering arm	
9	502 870 00	Lock pin	
10	803 002 00	Flanged bush	
11	502 868 00	Steering draft arm	
12	801 506 50	Roll pin	E 6 * 50
13	802 073 00	Collar	
14	802 846 01	Steering draft - Arm lock	
15	802 033 01	Lock pin body	
16	802 054 00	Locking pawl	
17	502 091 00	Spring	
18	802 055 00	Lock handle	
19	802 021 82	Nyloc nut	M 24 * 1.5 Nyloc
20	502 010 00	Washer	
21	802 852 00	Wheel fork L	
22	802 883 00	Wheel fork R	
23	502 835 00	Axle	
24	802 020 30	Nyloc nut	M 20 nyloc
25	802 021 00	Bracket	
26	800 612 62	Hex. Screw	M 12 * 1.15
27	800 612 64	Hex. Screw	M 12 * 125
28	800 612 60	Hex. Screw	M 12 * 100
29	802 515 25	Washer	0 13/20 *2.5
30	802 012 51	Nut	M 12
	802 714 80		
31	502 081 00	Pressure Plate	
32	822 006 00	Grease Nipple	

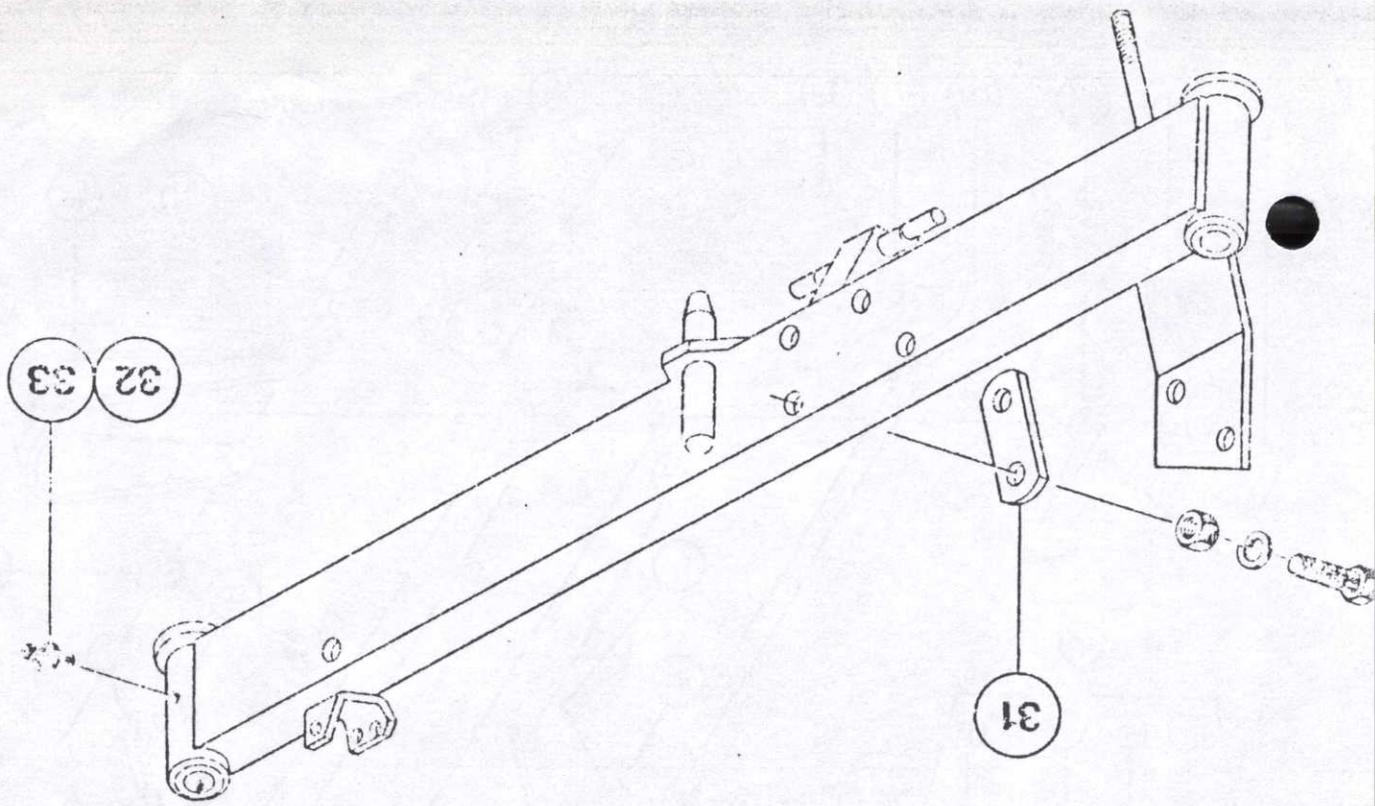


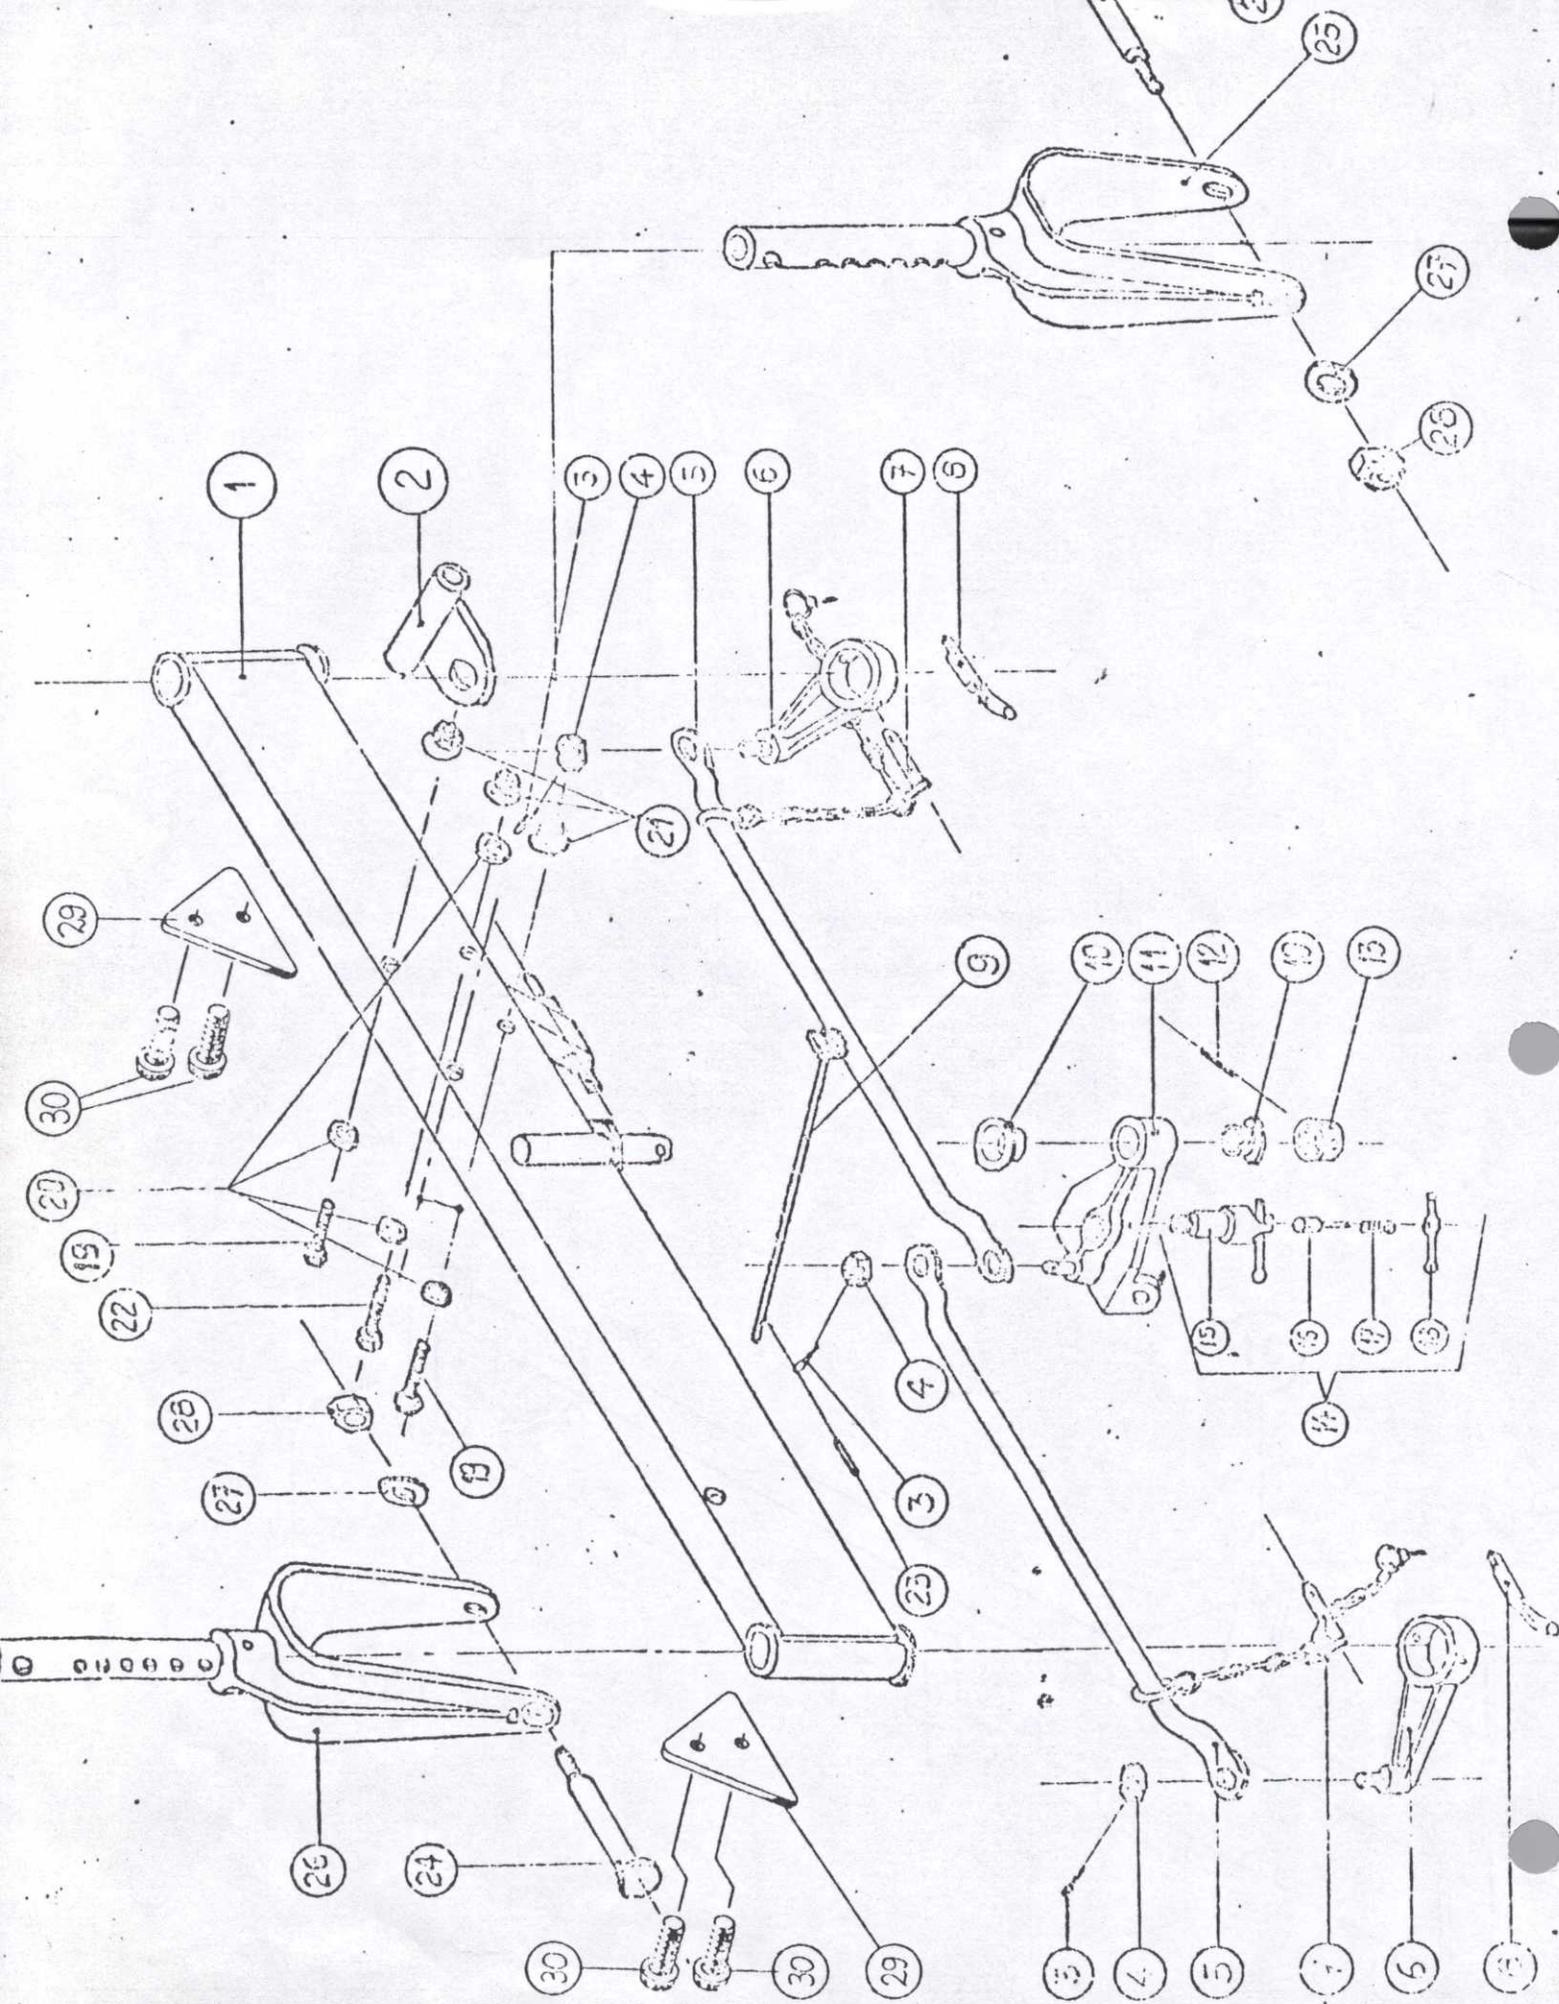


Ref.	Part no.	Description	Notes
1	502 834 11	Cross member L	
2	502 867 00	Push bar hitch	
3	805 024 17	Split pin	V 5 * 40
4	502 021 17	Crown nut	M24 *1.5 Din 9037
5	502 035 10	Connecting bar	
6	502 869 00	Steering arm	
7	502 573 00	Pin & Chain	
8	502 870 00	Lock pin	
9	502 817 00	Chain hook	
10	563 002 00	Flanged bush	
11	502 865 00	Steering draft arm	
12	804 506 50	Roll pin	E 6 *50
13	802 073 00	Collar	
14	502 816 01	Steering draft-arm-lock	
15	802 053 01	Lock pin body	
16	502 034 00	Locking Pawl	
17	502 091 00	Spring	
18	502 055 00	Lock handle	
19	800 614 64	Hex. Screw	M 12 * 100
20	802 515 00	Washer	0 13/20 * 2.5
21	802 014 00	Nut	M 12 B12
	802 714 80		
22	800 612 62	Hex. Screw	M 12 * 115
23	804 506 40	Roll pin	E 4 * 40
24	802 535 00	Axle	
25	502 882 00	Wheel fork L	
26	802 883 00	Wheel fork R	
27	802 040 00	Washer	
28	802 024 82	Nyloc nut	M 24 * 1.5 Nyloc
29	9 0001-3025-90	Rear reflector	
30	9-0001-2050-23	Bolt	M 5 * 20 Din 84
31	502 080 00	Pressure plate	
32	502 081 00	Pressure plate	
33	822 096 00	Grease nipple	

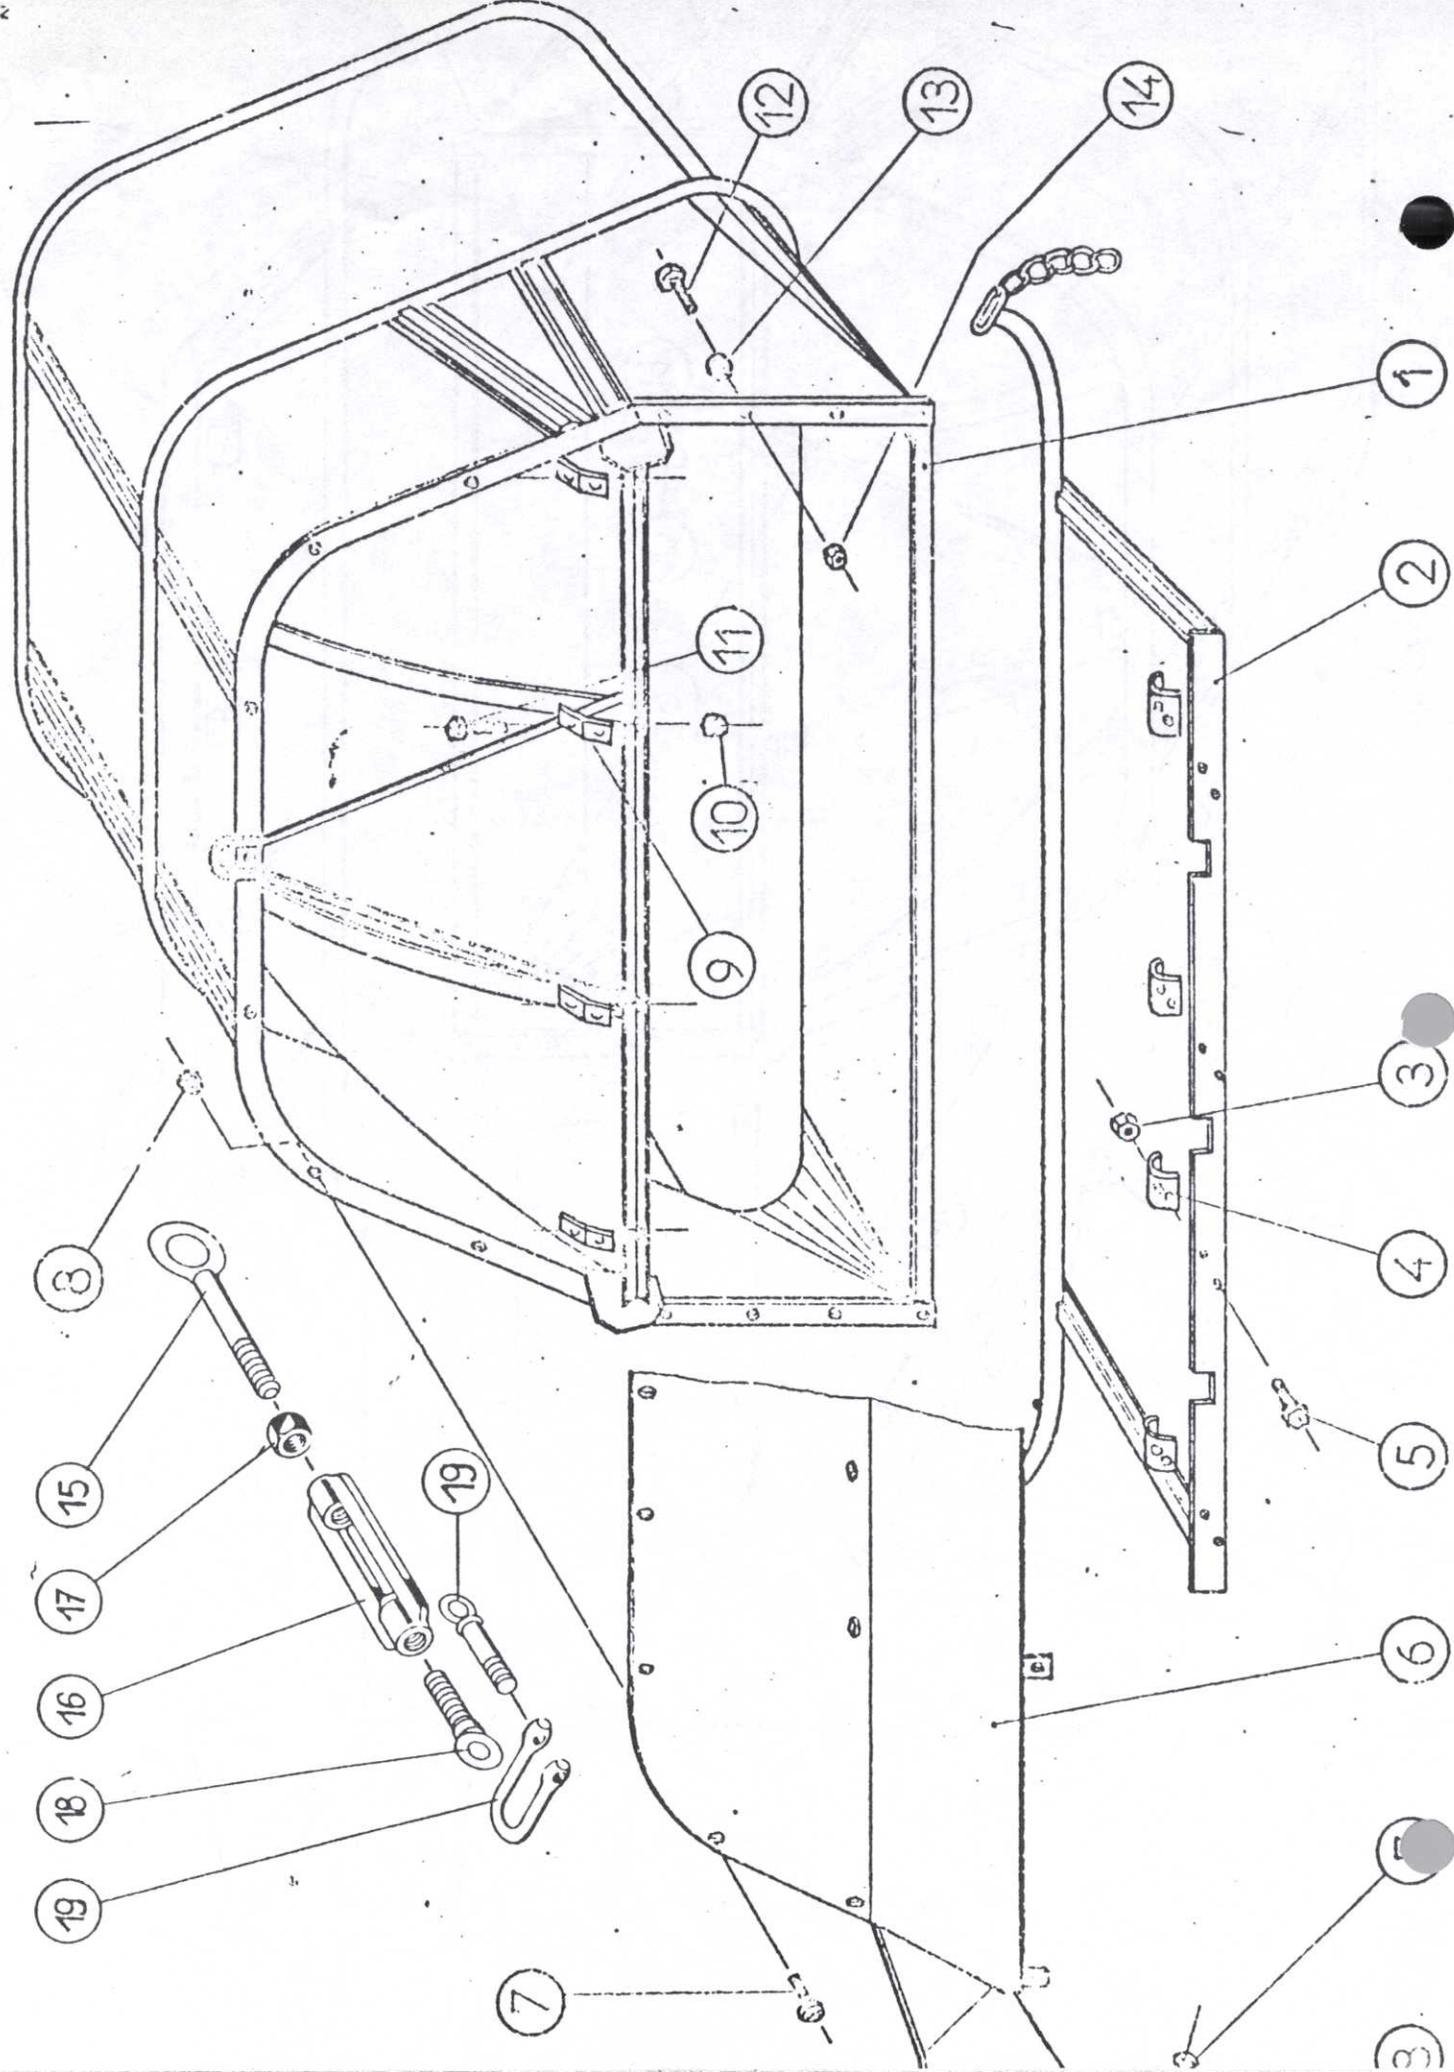


Ref.	Part no.	Description	Notes
1	502 806 02	Shaping tunnel	50-1890-0001-1
2	502 824 00	under shield	50-0690-0001-1
3	802 010 50	S/L nut	M 10 Tensilock
4	502 022 00	Hook hinge	50-0340-0001-0
5	801 310 16	S/L bolt	M 10*16 Tensilock
6	502 862 03	Steel sheet	50-6480-0037-1
7	801 010 22	Bolt	M 8*20 Din 921
8	802 010 50	S/L nut	M 8 Tensilock
9	502 064 00	Lifting hook	50-4330-0057-0
10	802 012 62	S/L nut	M 12 Tensilock
11	801 312 30	S/L bolt	M 12*40 Tensilock
12	800 612 25	Hex. Screw	M 10*35
13	802 612 50	Spring washer	B 12
14	802 012 29	S/L nut	M 12 Tensilock
15	50-2810-0016-1	Clamp member	
16	9-0001-2127-05	Clamping device	BM 16*170 Din 1480
17	9-0001-2016-05	Nut	M 16 Din 934
18	50-5500-0001-0	Ring screw	
19	830 700 53	D-Shackle	A 16 (Gr. 1) Din 82101

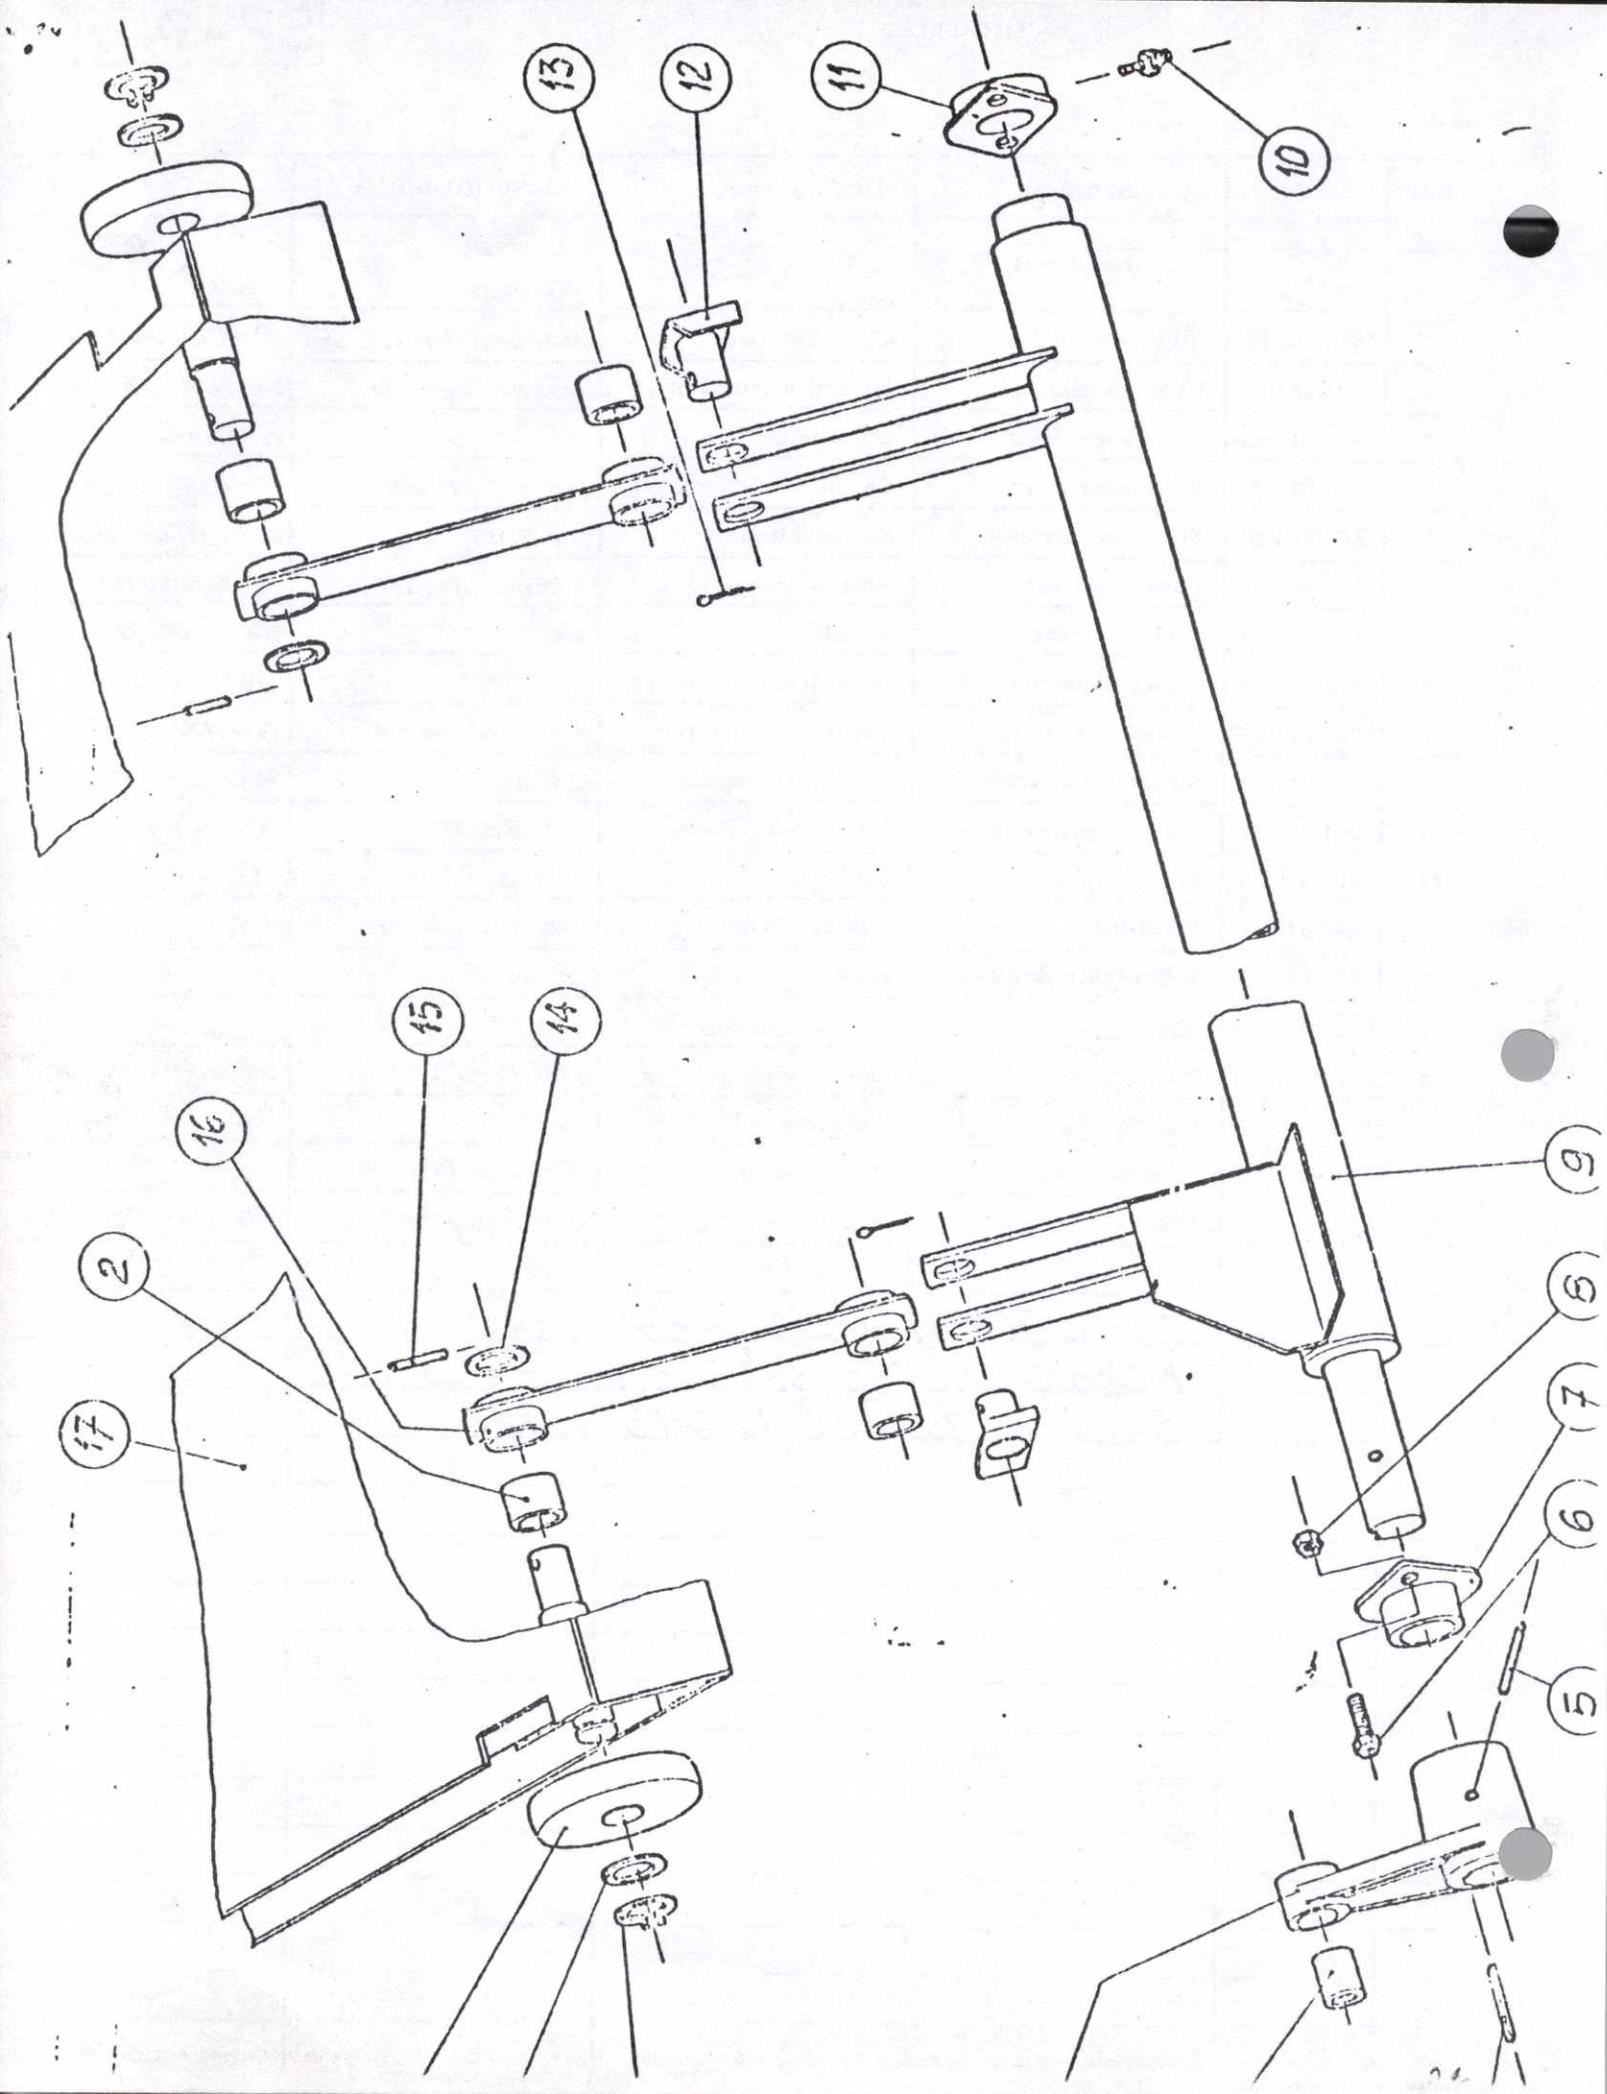


Ref.	Part no.	Description	Notes
1	502 016 00	Drive crank	
2	002 116 01	Bush	
3	805 825 00	Circlip	Din 471
4	802 018 00	Key	
5	801 508 60	Roll pin	
6	800 610 30	Hex. Screw	M 10*30 Din 933
7	502 051 00	Bush bearing	
8	802 010 28	S/L nut	M 10 Din 985
9	502 815 00	Crank shaft	
10	822 006 00	Grease nipple	
11	502 815 00	Bus bearing' L	
12	502 820 00	Crank pin	
13	805 003 36	Split pin	4*40 Din 94
14	802 525 37	Washer	
15	801 506 35	Roll pin	6*36 Din 1481
16	502 819 00	Connecting rod	
17	502 815 00	Table ram	
18	502 020 00	Ram roller	

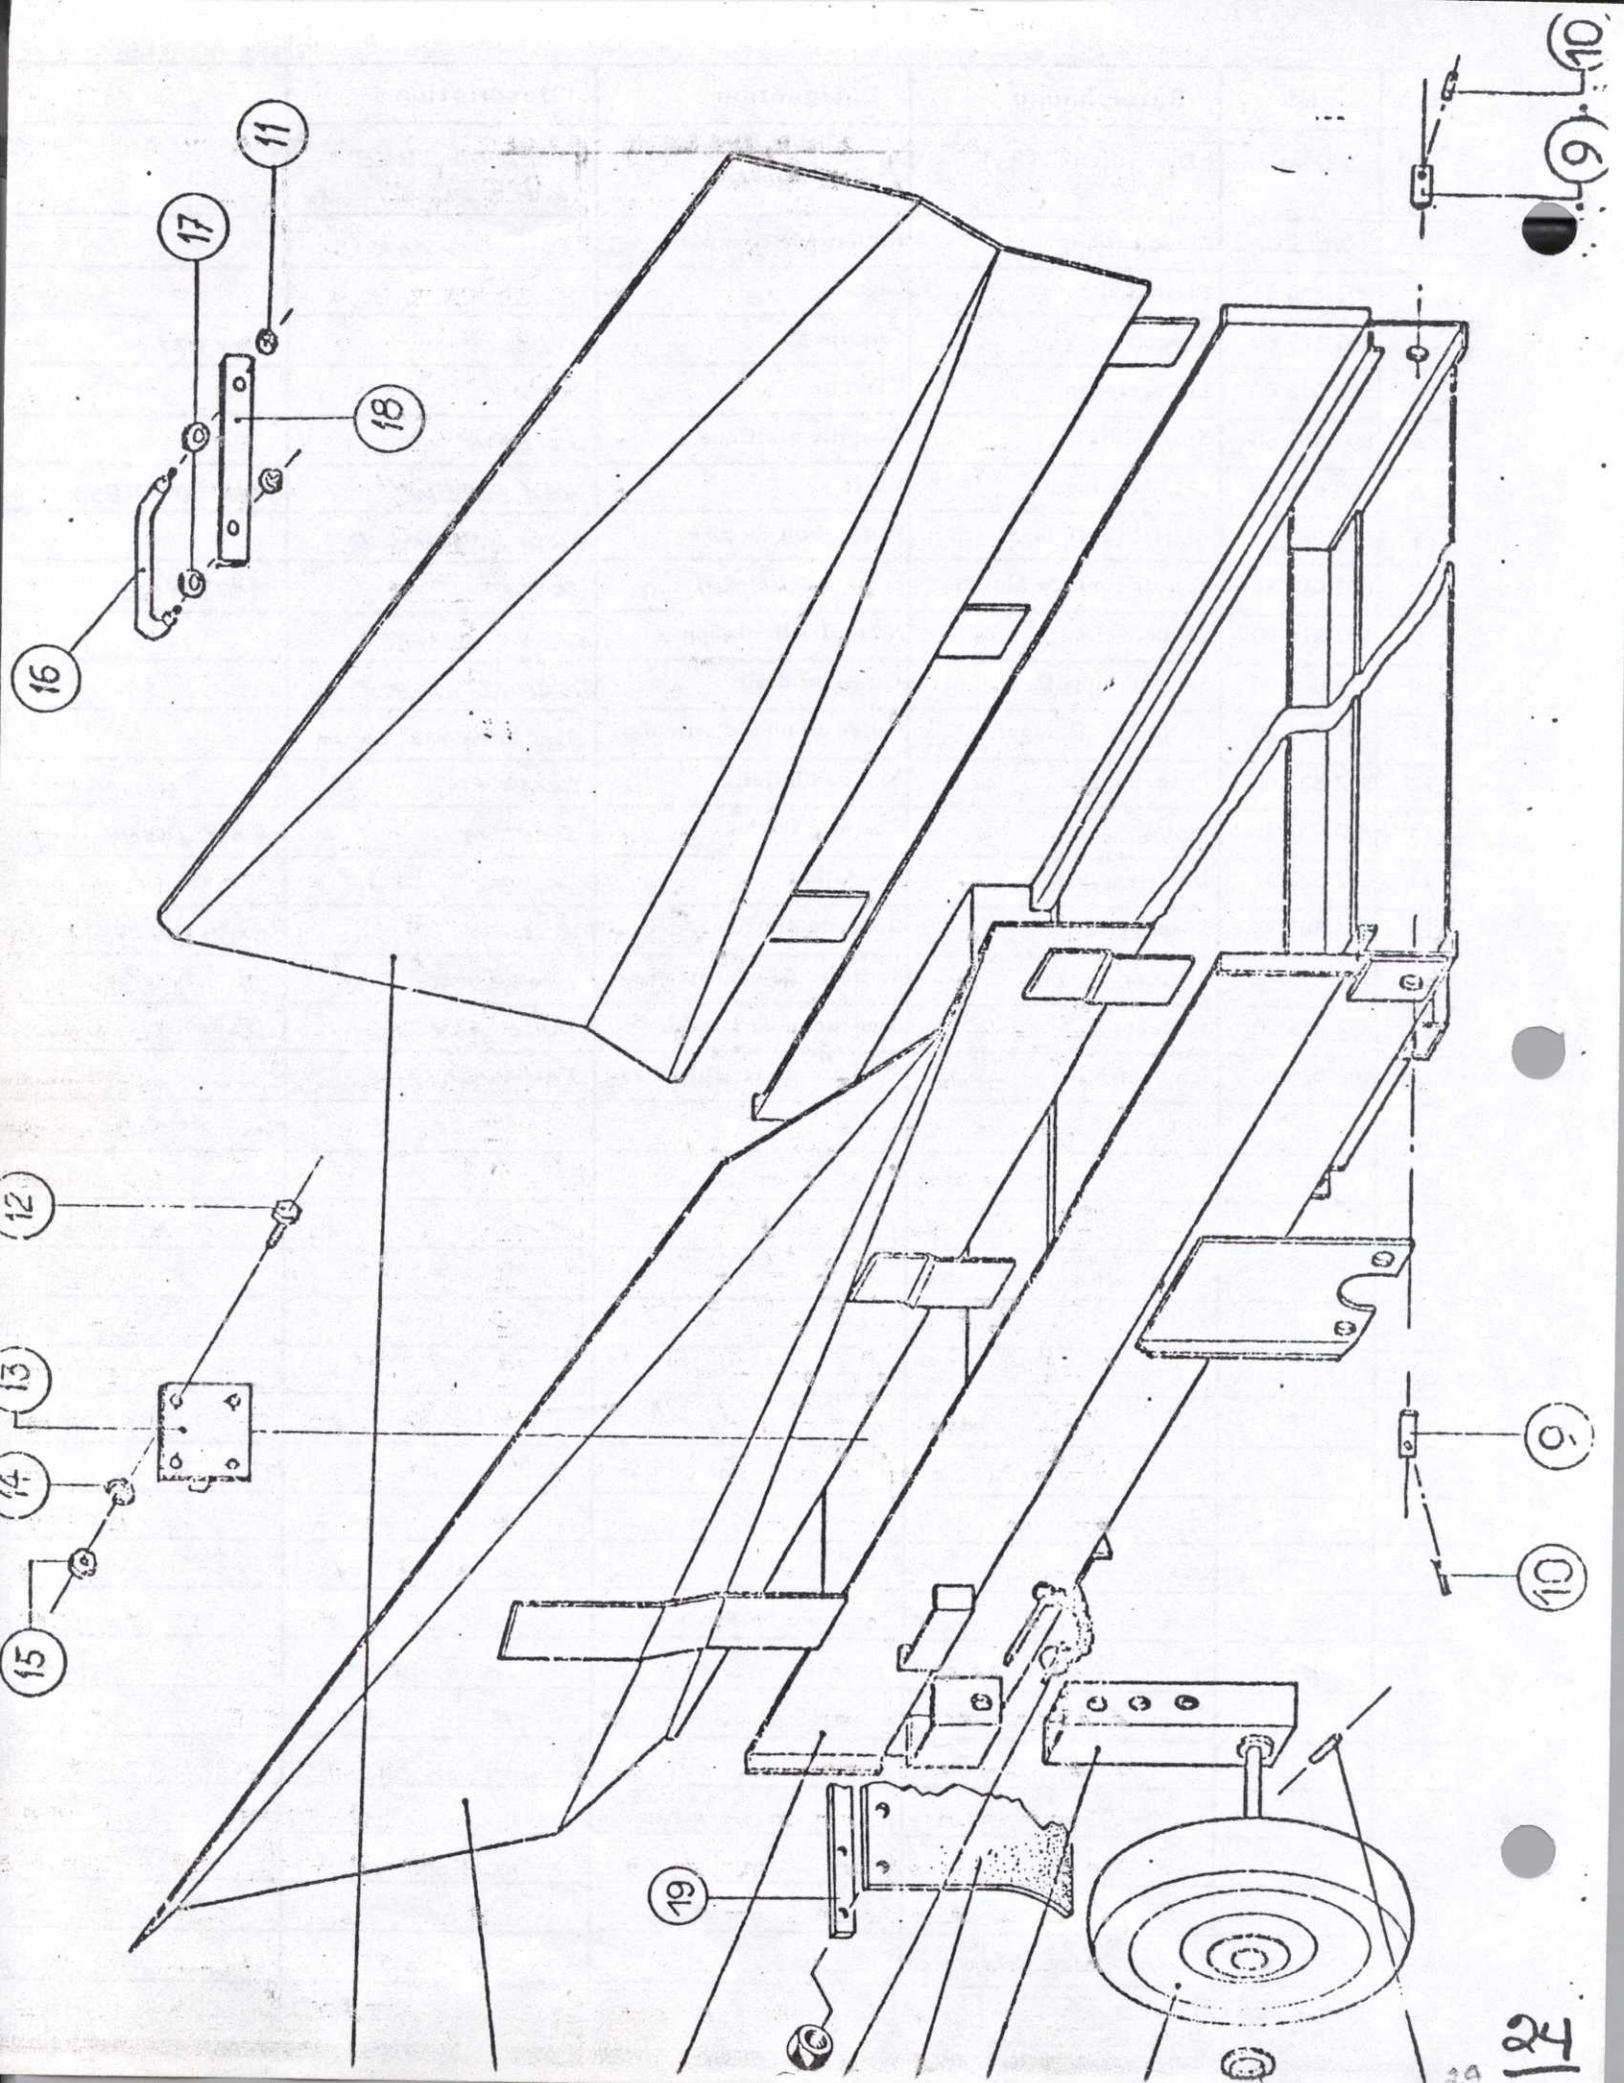


Ref.	Part no.	Description
1	502 822 01	Side plate R
2	502 821 01	Side plate L
3	502 814 01	Feeding table frame
4	596 833 05	Locating pin
5	502 818 00	Wheel stand
6	833 000 00	Wheel
7	802 525 37	Washer
8	804 506 35	Roll pin
9	502 019 02	Mounting pin
10	804 508 50	Roll pin
11	502 012 52	S/L nut
12	500 610 30	Hex. Screw
13	502 848 00	Transport position lock washer
14	802 710 80	Spring washer
15	802 010 00	Nut
16	502 074 00	Hand grip
17	502 513 39	Washer
18	502 075 00	Re-inforcing plate
19	50-2850-0001-0	Holding bar
20	50-6530-0002-0	Protection device
21	9-0001-2012-18	Hex. Head bolt M8*25 Din 558
	9-0001-2110-16	W/ nut M 8 Din 555
	9-0001-2157-20	Spring washer
	9-0001-2156-15	Washer

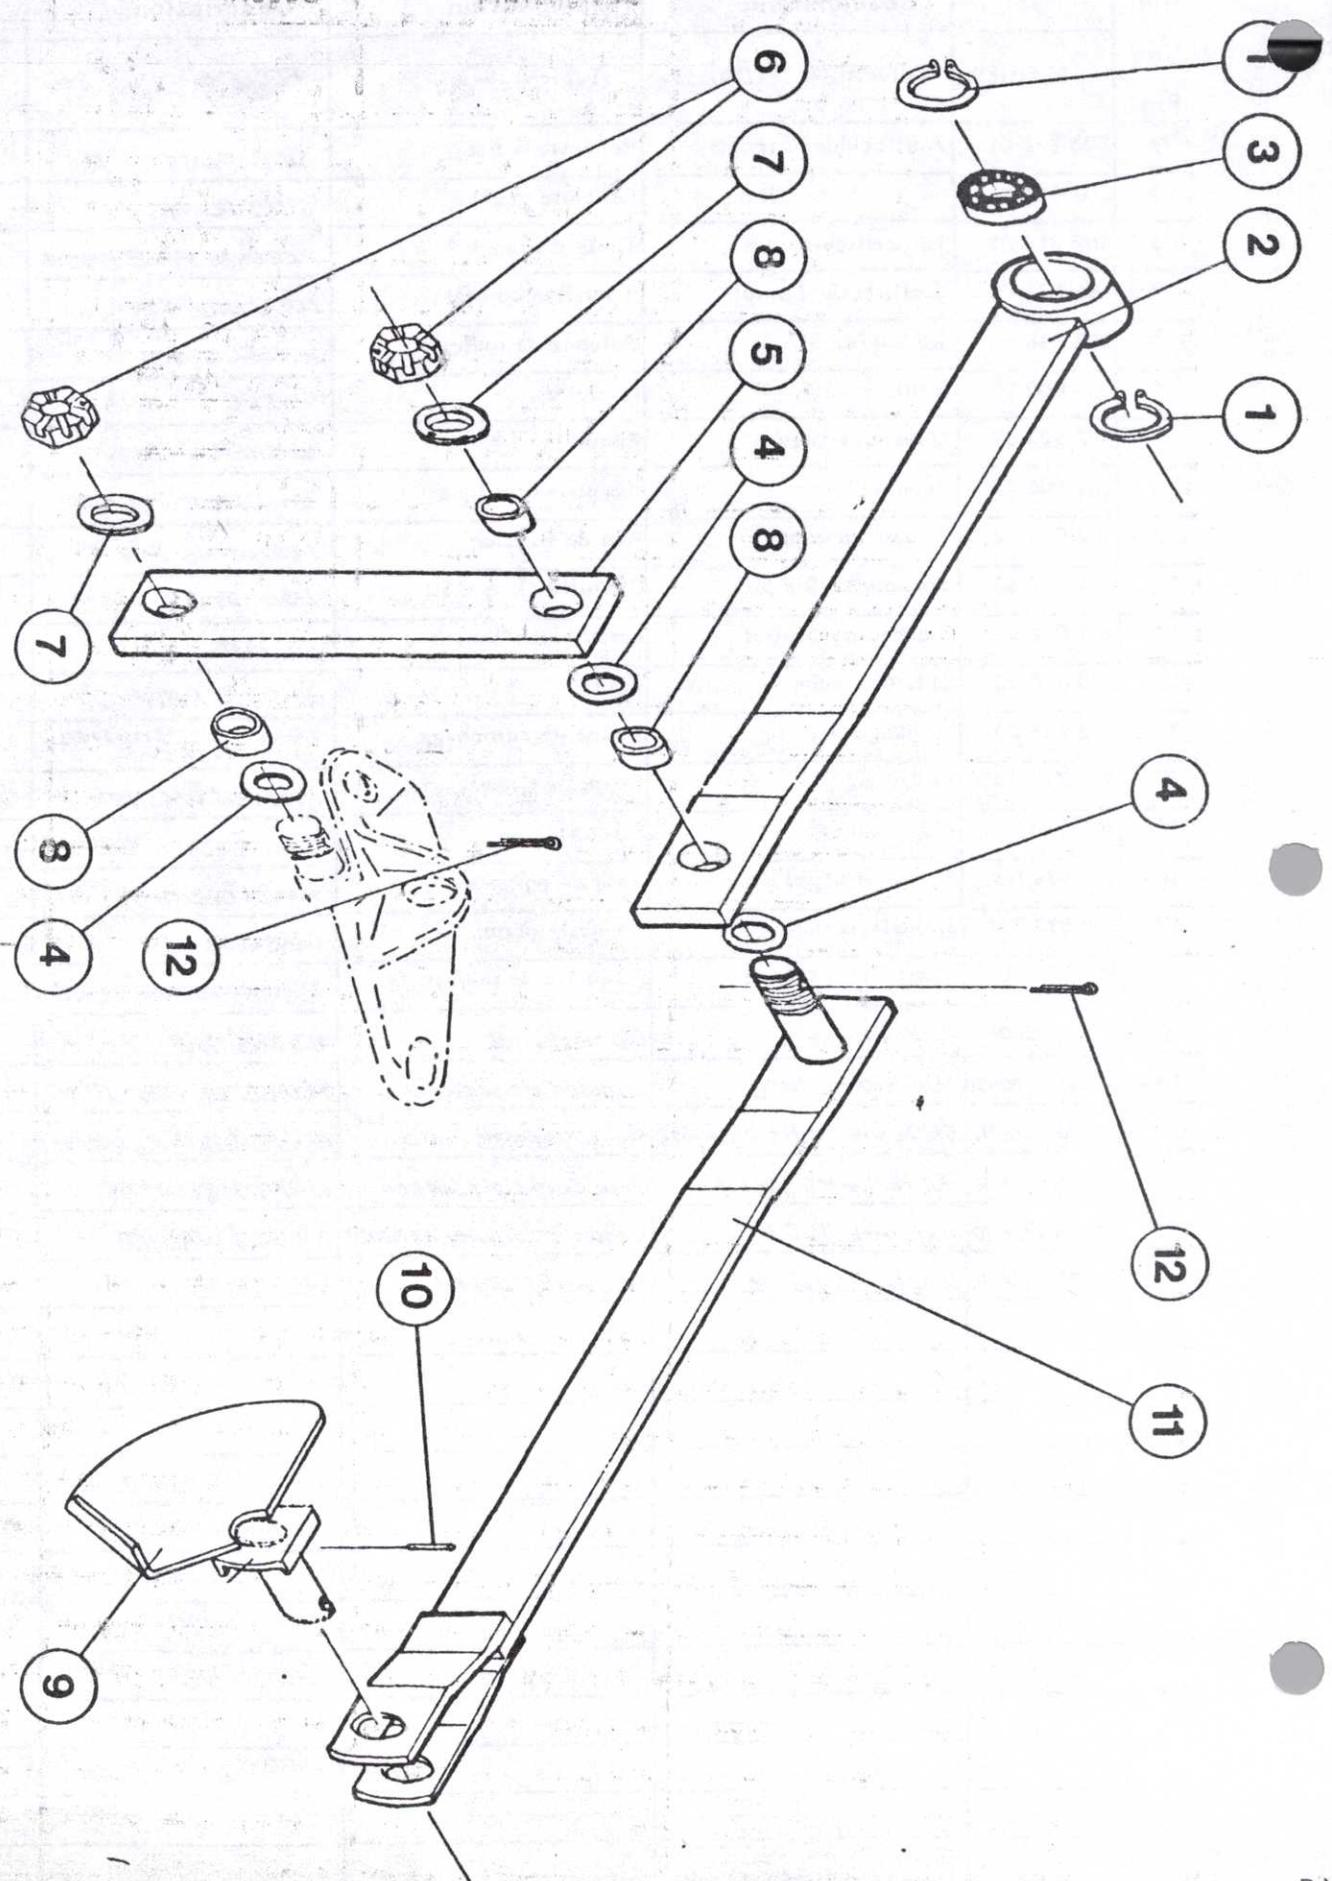

Ref.	Part no.	Description	Notes
1	805 962 00	Circlip	62 * 2 Din 472
2	502 876 00	Connecting rod	
3	810 030 64	Ball bearing	0206-2R5
4	802 525 45	Bush	
5	502 878 00	Swinging arm	
6	802 024 17	Crown nut	
7	802 525 38	Washer	0 252*40 * 2
8	002 262 00	Bush	
9	50-6530-0001-1	Connecting pin	
10	804 506 40	Roll pin	E 6 * 40
11	502 877 00	Connecting rod	
12	805 004 40	Split pin	

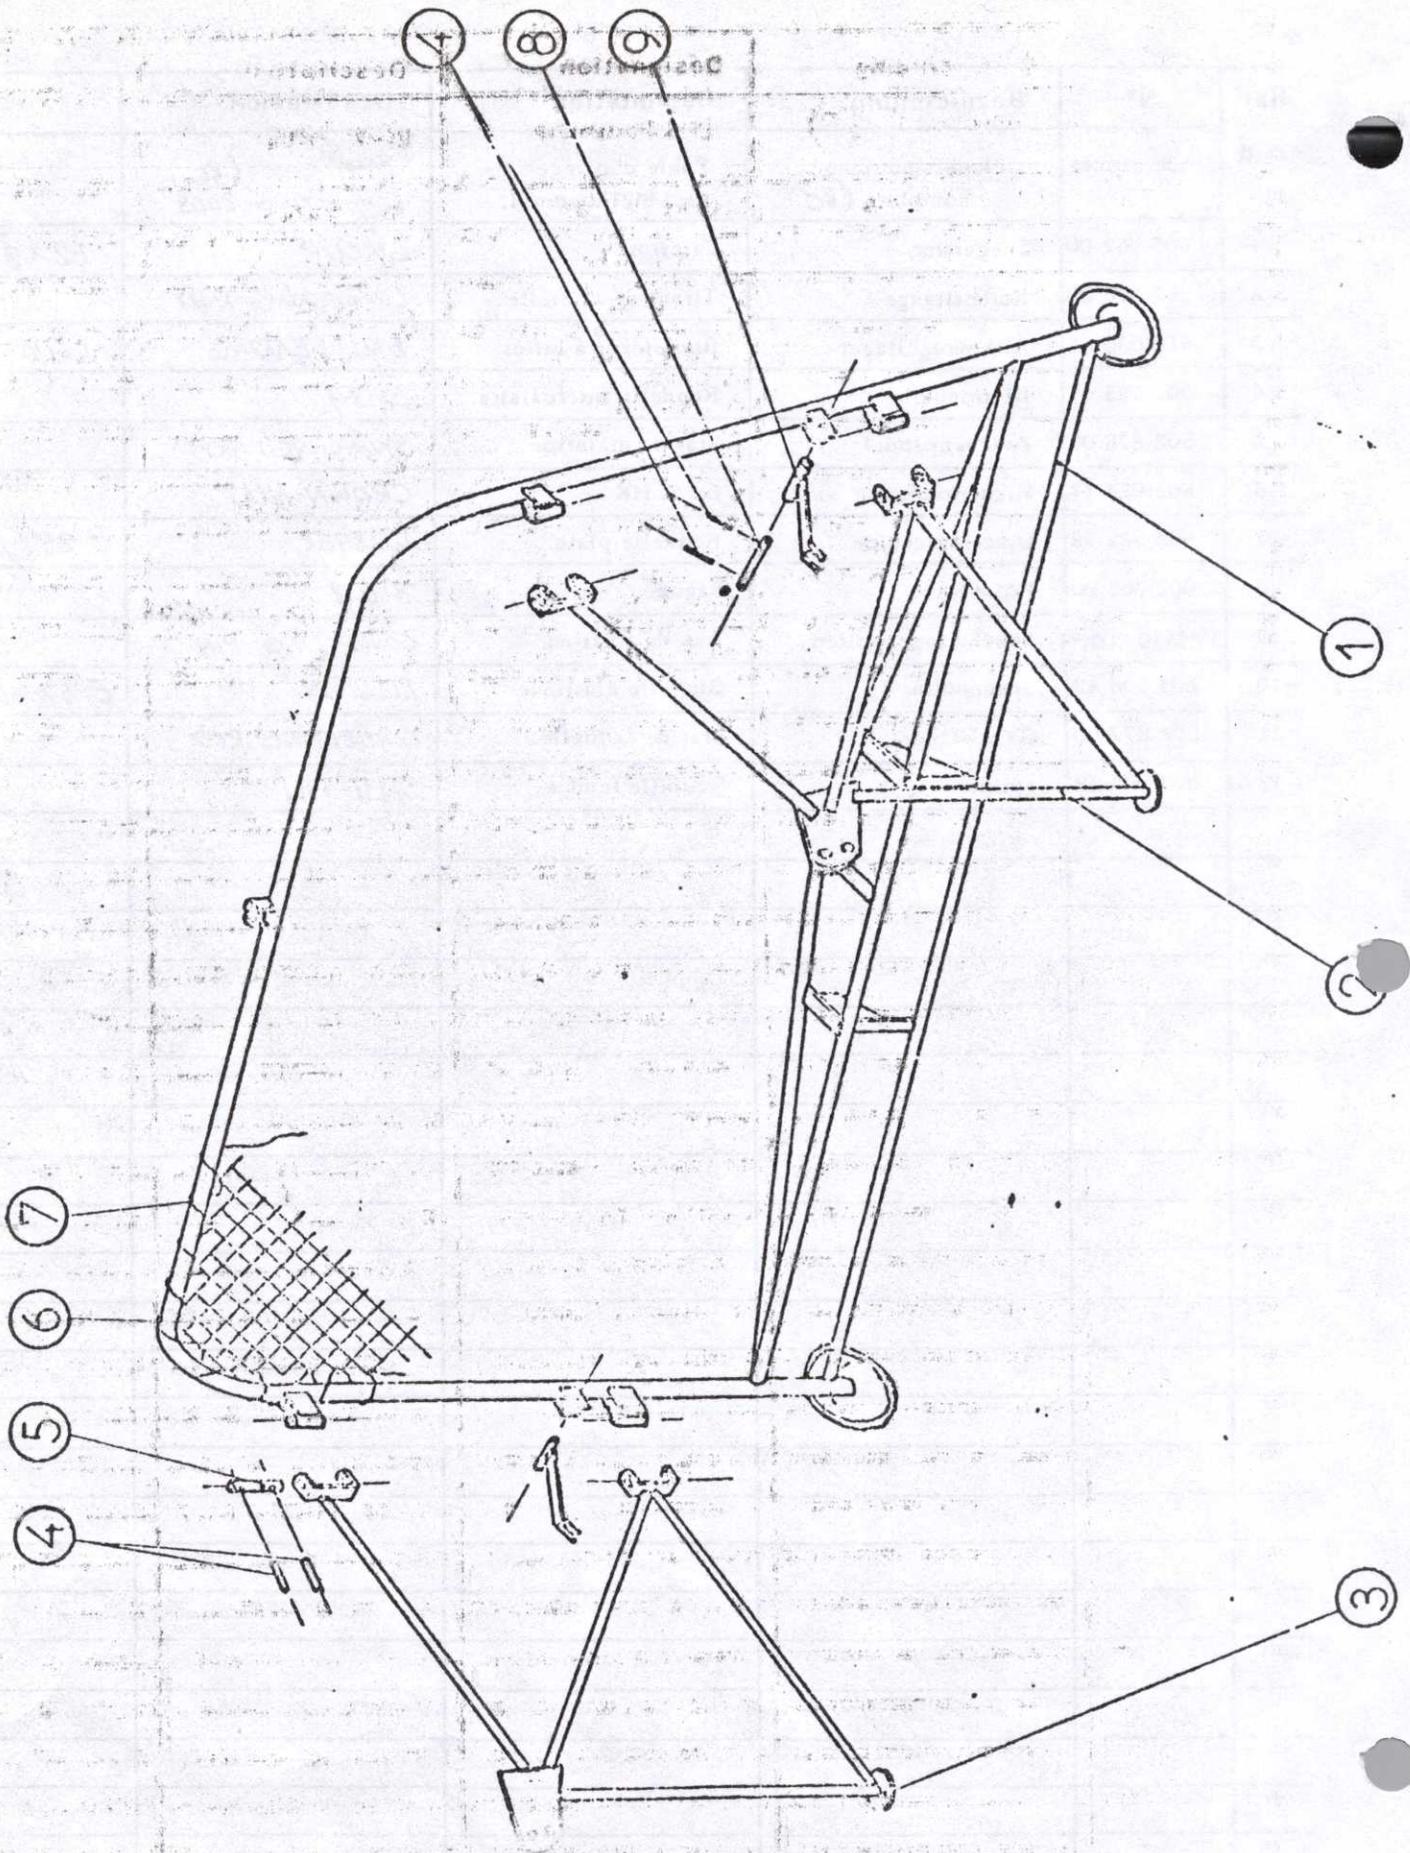

Ref.	Part no.	Description	Notes
1	502 807 10	Back frame	
2	502 809 10	Support L	
3	502 810 10	Support R	
4	804 506 24	Roll pin	E 5 * 24
5	502 013 10	Pin	
6	502 004 00	Back net	
7	832 006 00	Fixing cord	
8	502 014 10	Pin	
9	502 811 10	Transport locking plate	
1 a9	502 806 10	Back wall complete	

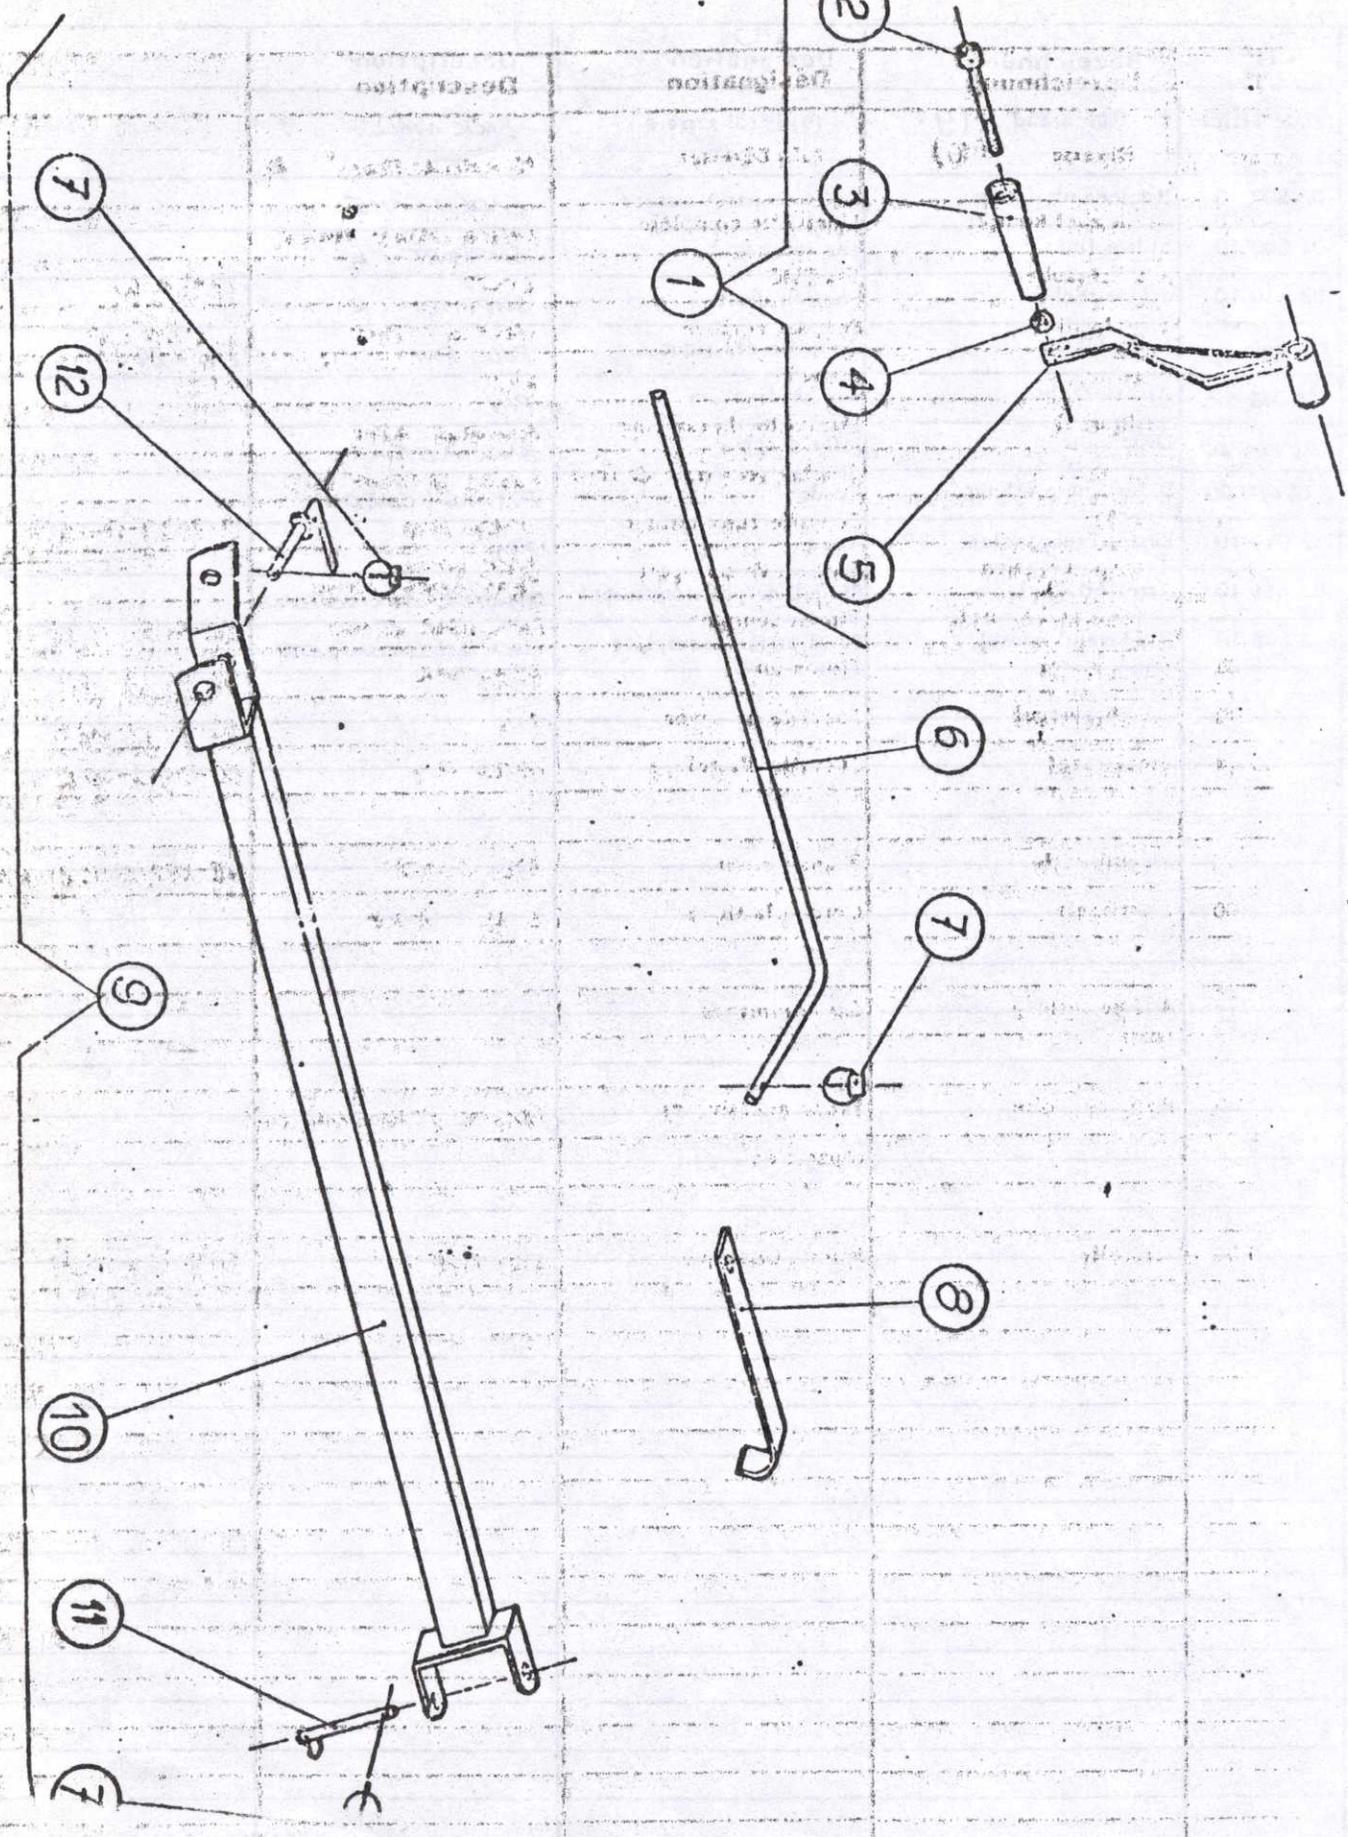

Ref.	Part no.	Description	Notes
1	502 864 00	Cable drum handle	
2	800 812 16	Bolt	M 12 * 100
3	830 500 05	Handle grip	0 30/20 * 90
4	802 012 00	Nut	M 12
5	502 861 00	Handle arm	
6	502 067 01	Wheel setting bar	
7	805 607 48	Lynch pin	0-7430-04016-0
8	502 069 00	Back wall transport hook	
9	502 851 00	Drawbar comp.	50-9480-0004-9
10	502 865 00	Drawbar	50-9480-0004-1
11	502 857 00	Pin	50-7430-0011-1
12	598 053 14	Hitch pin	50-7430-0012-1
	770 120 16	Pro shaft	WII-K92/4-UC 22-1550...
	502 839 00	Elastic rope	
	502 072 00	Plastic Repair manual	
	100 090 00	Silo - Plastic	60 m long totale